



[Maytag Residential Maytag A208 Washer Parts Parts Diagram 09 - FRONT VIEW](#)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y00000000		Not Available	SEE NOTE NOT AVAILABLE
2	203319	22203319		Cabinet
3	204439			Screw And Fstner Assembly
4	204445			Screw And Fastener Assembly
5	204454			Timer
7	204696			Button Kit For 2-3168
8	204702		Not Available	BUTTON KIT FOR 2-3185
9	205160		Not Available	TOP COVER-WHITE
11	205168		Not Available	TIMER DIAL, SUN-GLOW
12	205192		Not Available	CONTROL PANEL, SUN-GLOW
13	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
14	205261		Not Available	TEMPERATURE CONTROL SWITCH
16	205333		Not Available	BUTTON KIT FOR 2-5261
17	205337		Not Available	WATER LEVEL SWITCH

18	205340	204703		Button Kit For 2-3362
19	205341			Button Kit For 2-5337-1
20	210385			Lock Nut For Adjustable Leg
21	210684			Foot, Adjustable Leg
22	211726			Hinge, Ball Lid
23	212073			LID (WHITE)
24	212716			Bumper, Lid
25	212982	22001650		Fastener, Spring
26	212998		Not Available	PANEL, FRONT (WHT)
27	213007			Xfor Cabinet See Cabinet, Back
28	213077		Not Available	CAP FOR TIMER KNOB
29	213117	67006908		Screw, Ice Rack
30	213123	22001496		Front Panel Fastener And Screw
31	213322		Not Available	MAYTAG DECAL
32	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
33	Y302699	22003428		Leg, Adjustable

