



Maytag [Residential Maytag A208S Washer Parts](#) Parts Diagram 07 - ELECTRICAL COMPONENTSQ  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">200806</a>			Solenoid
2	<a href="#">201168</a>			Diverter Valve
3	201807	<a href="#">12002353</a>		Motor-Drve
4	202770	<a href="#">279347</a>		Switch-Lid
5	203177	<a href="#">205613</a>		Water Valve
6	203235		Not Available	WIRE HARNESS - FILL
7	203236		Not Available	WIRE HARNESS - SUDS SAVE
9	204463		Not Available	TIMER
10	<a href="#">204475</a>			Major Wire Harness
11	<a href="#">204590</a>			Cord, Power
12	<a href="#">205131</a>			Switch, Motor External Start
14	205140		Not Available	EXTERNAL START SWITCH
15	205167		Not Available	TIMER DIAL, SUN-GLOW
18	<a href="#">205321</a>			Temperature Control Switch
19	205337		Not Available	WATER LEVEL SWITCH
20	210186	<a href="#">3370225</a>		Screw

21	<a href="#">211065</a>		Spring, Index Wheel
22	<a href="#">211605</a>		Bezel, Timer Dial
23	211737	<a href="#">248562</a>	Terminal
24	<a href="#">211881</a>		Grommet, Cord Part Not Used- Gas Models Only
25	213077	Not Available	CAP FOR TIMER KNOB
26	<a href="#">213501</a>		Screw, No.6-20 X 1-1/8 Inch
27	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
28	<a href="#">301548</a>		Clamp, Ground Wire
29	303846	<a href="#">22003781</a>	Screw, Ground Strap
31	<a href="#">313122</a>		Screw - Baffle To Tumbler
32	Y313262	<a href="#">W10116752</a>	Retainer-

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>