

Maytag A208S 10 - FRONT VIEW



[Maytag Residential Maytag A208S Washer Parts](#) Parts Diagram 10 - FRONT VIEW

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y00000000		Not Available	SEE NOTE NOT AVAILABLE
2	203319	22203319		Cabinet
3	204439			Screw And Fstner Assembly
4	204445			Screw And Fastener Assembly
6	204463		Not Available	TIMER
7	204696			Button Kit For 2-3168
8	204702		Not Available	BUTTON KIT FOR 2-3185
9	205160		Not Available	TOP COVER-WHITE
10	205167		Not Available	TIMER DIAL, SUN-GLOW
12	205192		Not Available	CONTROL PANEL, SUN-GLOW
13	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
15	205321			Temperature Control Switch
17	205337		Not Available	WATER LEVEL SWITCH
18	205340	204703		Button Kit For 2-3362
19	205341			Button Kit For 2-5337-1

20	210385		Lock Nut For Adjustable Leg
21	210684		Foot, Adjustable Leg
22	211726		Hinge, Ball Lid
23	212073		LID (WHITE)
24	212716		Bumper, Lid
25	212982	22001650	Fastener, Spring
26	212998	Not Available	PANEL, FRONT (WHT)
27	213007		Xfor Cabinet See Cabinet, Back
28	213077	Not Available	CAP FOR TIMER KNOB
29	213117	67006908	Screw, Ice Rack
30	213123	22001496	Front Panel Fastener And Screw
31	213322	Not Available	MAYTAG DECAL
32	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
33	Y302699	22003428	Leg, Adjustable

