



Maytag [Residential Maytag A208S Washer Parts](#) Parts Diagram 14 - REAR VIEW  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203177	<a href="#">205613</a>		Water Valve
2	203319	<a href="#">22203319</a>		Cabinet
3	<a href="#">204590</a>			Cord, Power
4	205160		Not Available	TOP COVER-WHITE
5	205192		Not Available	CONTROL PANEL, SUN-GLOW
6	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
7	<a href="#">210385</a>			Lock Nut For Adjustable Leg
8	<a href="#">210684</a>			Foot, Adjustable Leg
9	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
10	211878		Not Available	PLATE, ACCESS
11	<a href="#">211881</a>			Grommet, Cord Part Not Used-Gas Models Only
12	212276	<a href="#">W10116760</a>		Screw
13	<a href="#">212277</a>			Screw, No.8 X 1/2 Inch
14	<a href="#">212984</a>			Valve Mounting Plate

15	212985	<a href="#">22002924</a>	Plate, Access
16	213009	Not Available	CONTROL COVER-WHITE
17	213121	<a href="#">3400111</a>	Screw, 12-14 X 5/8
18	214135	Not Available	CLIP, FASTENER
19	214337	<a href="#">96160</a>	Screen
20	214519		LABEL, ELECTRICAL INSTR. PART NOT USED-GAS MODELS ONLY
21	Y302699	<a href="#">22003428</a>	Leg, Adjustable
22	<a href="#">312620</a>		Screw, Sems

