


Maytag A209S 04 - CONTROL PANEL, TIMER & SWITCHES

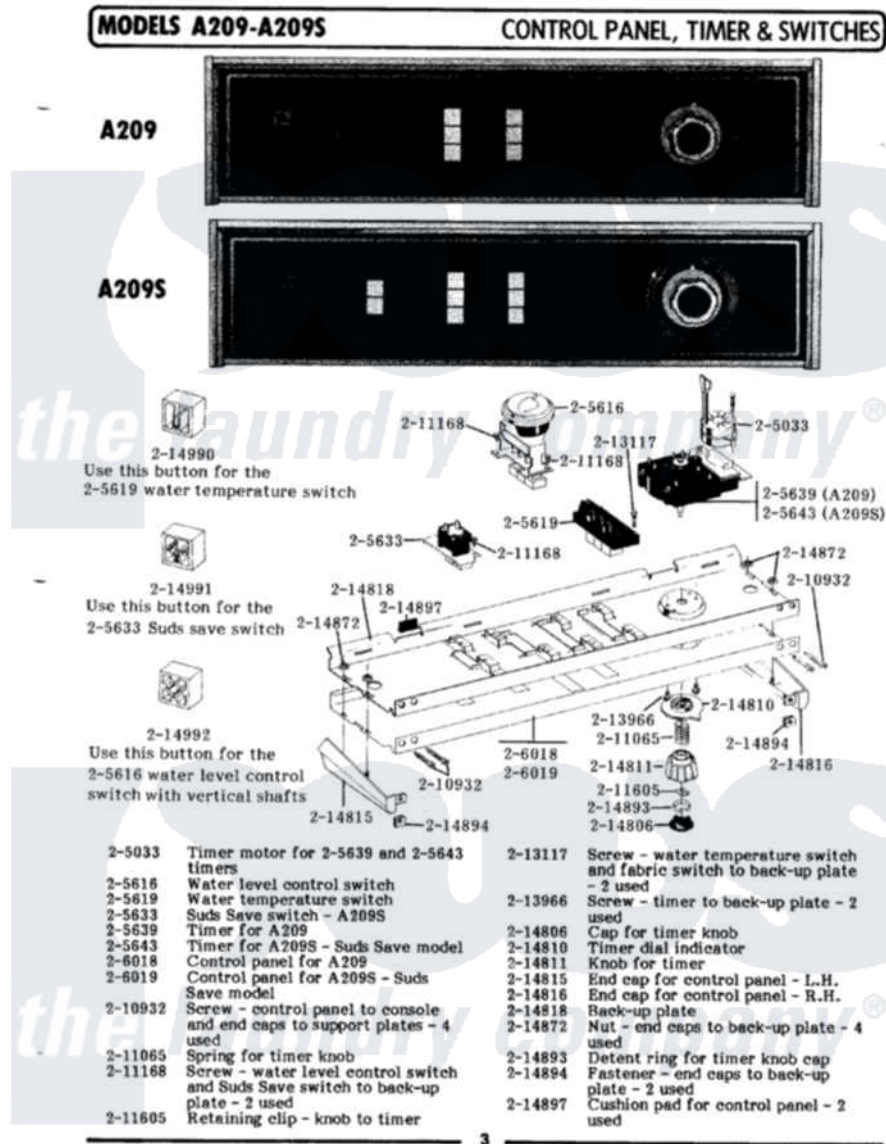

Maytag [Residential Maytag A209S Washer Parts](#) Parts Diagram 04 - CONTROL PANEL, TIMER & SWITCHES
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	22205033		Motor- Tim
2	205616			Water Level Control Switch
3	205619		Not Available	WATER TEMPERATURE SWITCH
4	205633			Suds Save Switch
6	205643			Timer
8	206019		Not Available	CONTROL PANEL
9	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
10	211065			Spring, Index Wheel
11	211168	W10139210		Screw, 8-18 X 5/16
12	211605			Bezel, Timer Dial
13	213117	67006908		Screw, Ice Rack
14	213966	3400014		Screw
15	214806		Not Available	CAP FOR TIMER KNOB
16	214810	22001571		Bezel, Timer Dial
17	214811			Knob For Timer

18	214815		End Cap F/Control Panel-LH
19	214816		End Cap F/Control Panel-RH
20	214818		Back Up Plate
21	214872		Palnut, End Cap Note: Nut, Lamp Holder
22	214893	Not Available	DETENT RING F/TIMER KNOB CA
23	214894		Fastener, End Cap
24	214897		Pad, Control Panel

