



Maytag [Residential Maytag A211S Washer Parts](#) Parts Diagram 07 - TOP
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	215075			Fastener, Control Panel To Console
2	205635			Console
3	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	313551	31-3551		Dw Minimanu
5	211726			Hinge, Ball Lid
6	212073			LID (WHITE)
7	205538		Not Available	TOP COVER-WHITE
8	212716			Bumper, Lid
9	204445			Screw And Fastener Assembly
12	210186	3370225		Screw
13	204590			Cord, Power
14	211881			Grommet, Cord Part Not Used-Gas Models Only
15	213501			Screw, No.6-20 X 1-1/8 Inch
16	214898			Cover For Lid Switch

17	205415	279347	Switch-Lid
18	911267		Screw, Pump Cover
19	214987		Moisture Barrier For Switch
20	410635		Fastener
21	214813	Not Available	LEVER FOR LID SWITCH
22	214805		Pin For Unbalance Lever
23	215236	214804	Unbalance Lever
24	204968		Plunger And Bracket Assembly--W
25	213718		Plunger, Lid Switch
26	213720		Spring, Lid Switch
27	211500		Washer, Bracket To Top Cover
28	910182	25-7809	Screw, No.6-20 1/2 Flthd Torx
29	207159	489355	Screw, 8 X 1/2
30	207172		Top Cover
31	215704		Lever, Unbalance
32	215700	Not Available	LID SWITCH PLUNGER
33	Y215699	22001678	Bracket, Switch And Fuse

