


Maytag A21CT 01 - FRONT VIEW

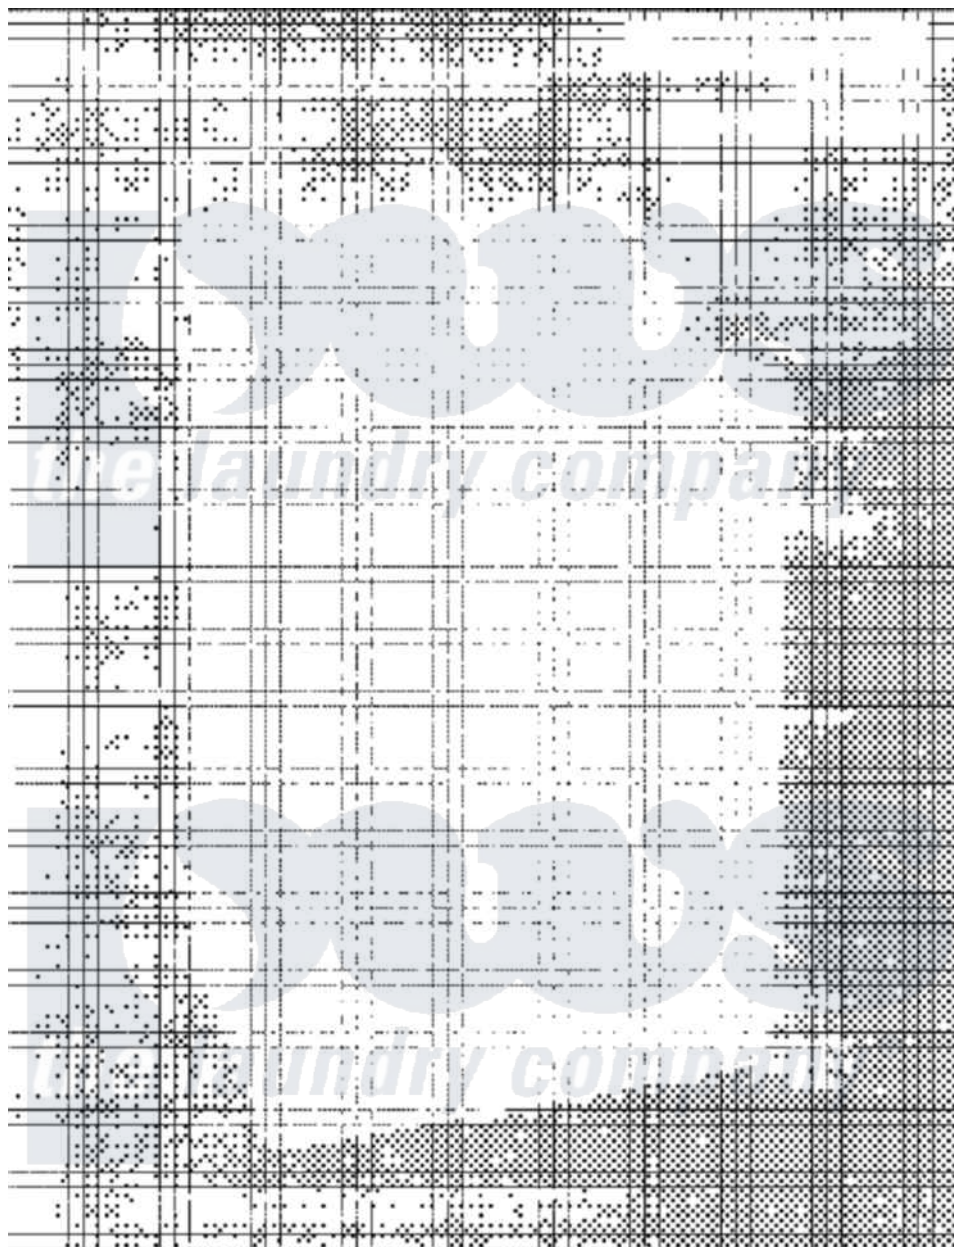

Maytag [Residential Maytag A21CT Washer Parts](#) Parts Diagram 01 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	205415	279347		Switch-Lid
002	203188		Not Available	TIMER ACCESS DOOR (WHT)
003	NLA		Not Available	TOP COVER (WHT)
004	NLA		Not Available	MAYTAG COIN SLIDE
005	NLA		Not Available	CABINET (WHT)
006	204051	22204051		Knob
007	204109			Light, Signal
008	204439			Screw And Fstner Assembly
009	204445			Screw And Fastener Assembly
010	NLA		Not Available	CONTROL CENTER (WHT)
011	NLA		Not Available	CONTROL CENTER (WHT)
012	NLA		Not Available	CONTROL CENTER (WHT)
013	204968			Plunger And Bracket Assembly--W
014	NLA		Not Available	COIN SLIDE
015	NLA		Not Available	COIN SLIDE

016	205353		Switch, DiAI-A-Fabric
017	NLA	Not Available	TOP COVER (WHT)
018	NLA	Not Available	CONTROL COVER (WHT)
019	NLA	Not Available	CONTROL PANEL W/LENS
020	210385		Lock Nut For Adjustable Leg
021	210684		Foot, Adjustable Leg
022	211726		Hinge, Ball Lid
023	212519	488234	Screw 8-32 X 1/4
024	212716		Bumper, Lid
025	212998	Not Available	PANEL, FRONT (WHT)
026	213007		Xfor Cabinet See Cabinet, Back
027	NLA	Not Available	GASKET, CONTROL CENTER
028	NLA	Not Available	GASKET, CONTROL CENTER
029	213099		Lens For Control Panel
030	213949		Screw, No.8-18 X 5/16 Inch
031	214610		Bumper, Lid
032	NLA	Not Available	LID (WHT)
033	Y302699	22003428	Leg, Adjustable
034	214650		Screw For 2-4051 Knob
035	214901	Not Available	LID-WHITE
036	212982	22001650	Fastener, Spring

the laundry company[®]

the laundry company[®]