


Maytag A25CS 02 - CONTROL PANEL, TOP CVR & LID SWTCH (12)

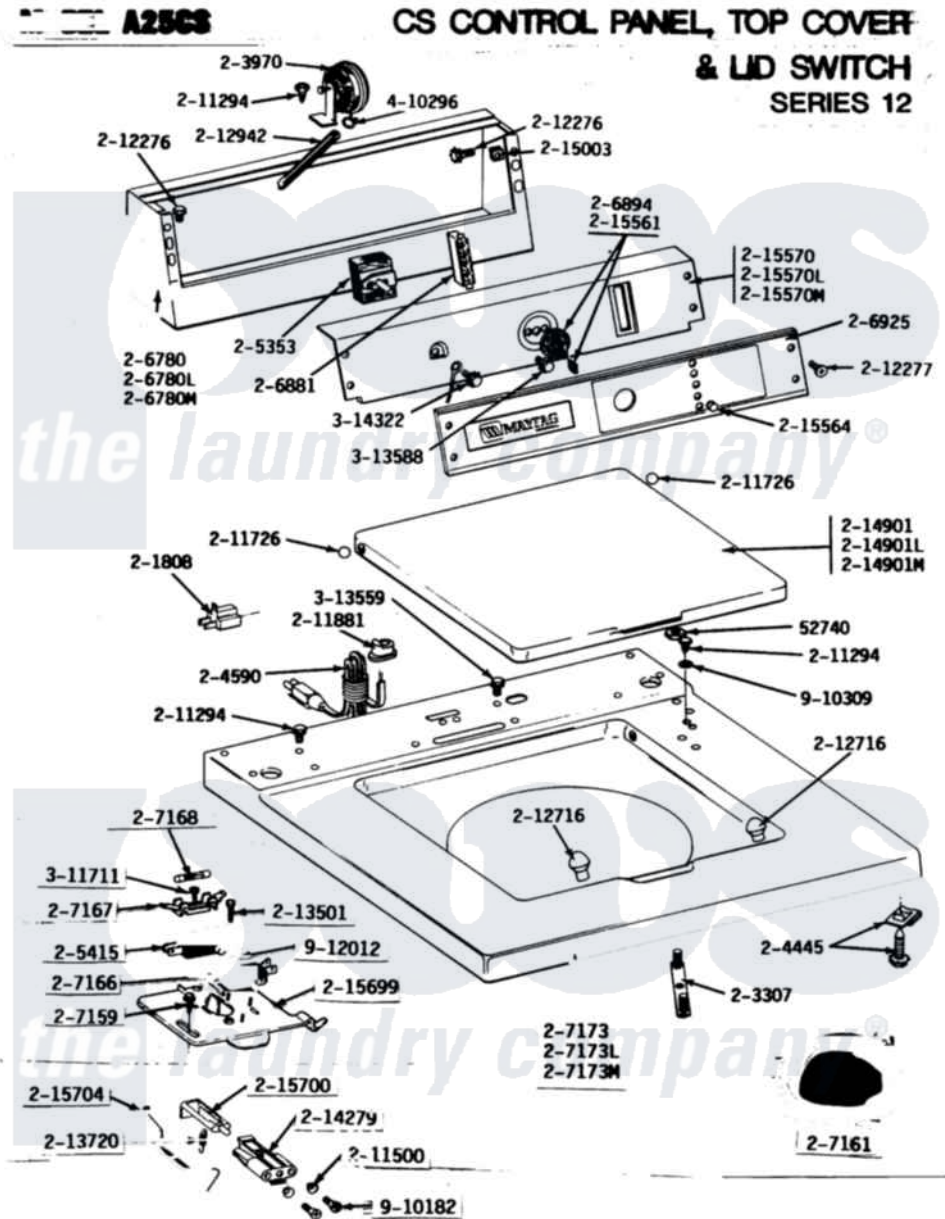

Maytag [Residential Maytag A25CS Washer Parts](#) Parts Diagram 02 - CONTROL PANEL, TOP CVR & LID SWTCH (12)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052740	62739		Nut, Lock
002	Y201808			Converter
003	NLA		Not Available	MTG. STRAP---NA
004	203970			Switch, Water Level
005	204445			Screw And Fastener Assembly
006	204590			Cord, Power
007	205353			Switch, DiAl-A-Fabric
008	205415	279347		Switch-Lid
009	206780			Control Cover Assembly
"	206780L	206780		Control Cover Assembly
"	NLA		Not Available	CONTROL COVER ASSY
010	206881			Indicator, Light
011	206894			Knob, Selector
012	NLA		Not Available	CONTROL PANEL WITH LENS - CS &
013	207159	489355		Screw, 8 X 1/2
014	207161			Wire Harness

015	207166		Switch, Check
016	207167		Block, Fuse
017	207168	22001682	Switch Assembly, Lid W/4amp Fuse
018	207173		Not Available
	NLA		Not Available
019	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
020	211500		Washer, Bracket To Top Cover
021	211726		Hinge, Ball Lid
022	211881		Grommet, Cord Part Not Used-Gas Models Only
023	212276	W10116760	Screw
024	212277		Screw, No.8 X 1/2 Inch
025	212716		Bumper, Lid
026	212942	22001619	Tube, Water Level Switch
027	213501		Screw, No.6-20 X 1-1/8 Inch
028	213720		Spring, Lid Switch
029	214279	204968	Plunger And Bracket Assembly--W
030	214901		Not Available
	NLA		Not Available
031	215003		Fastener, Panel And Bracket
032	215561	206894	Knob, Selector
033	215564		Lens, Indicator Light
034	215570	22001592	(WHT)
	NLA		Not Available
035	Y215699	22001678	Bracket, Switch And Fuse
036	NLA		Not Available
037	215704		LID SWITCH PLUNGER
038	Y311711		Lever, Unbalance
039	Y313559		Screw, Fuse Block
040	Y313588	488234	Screw
041	Y314322	211251	Screw 8-32 X 1/4
042	410296	596669	Screw, Transformer
043	910182	25-7809	Clamp, Manifold
044	910309		Screw, No.6-20 1/2 Flthd Torx
045	912012	3400409	Washer, Mounting Strap
			Screw

the laundry company[®]