


MODELS A283-A284

CONTROL PANEL

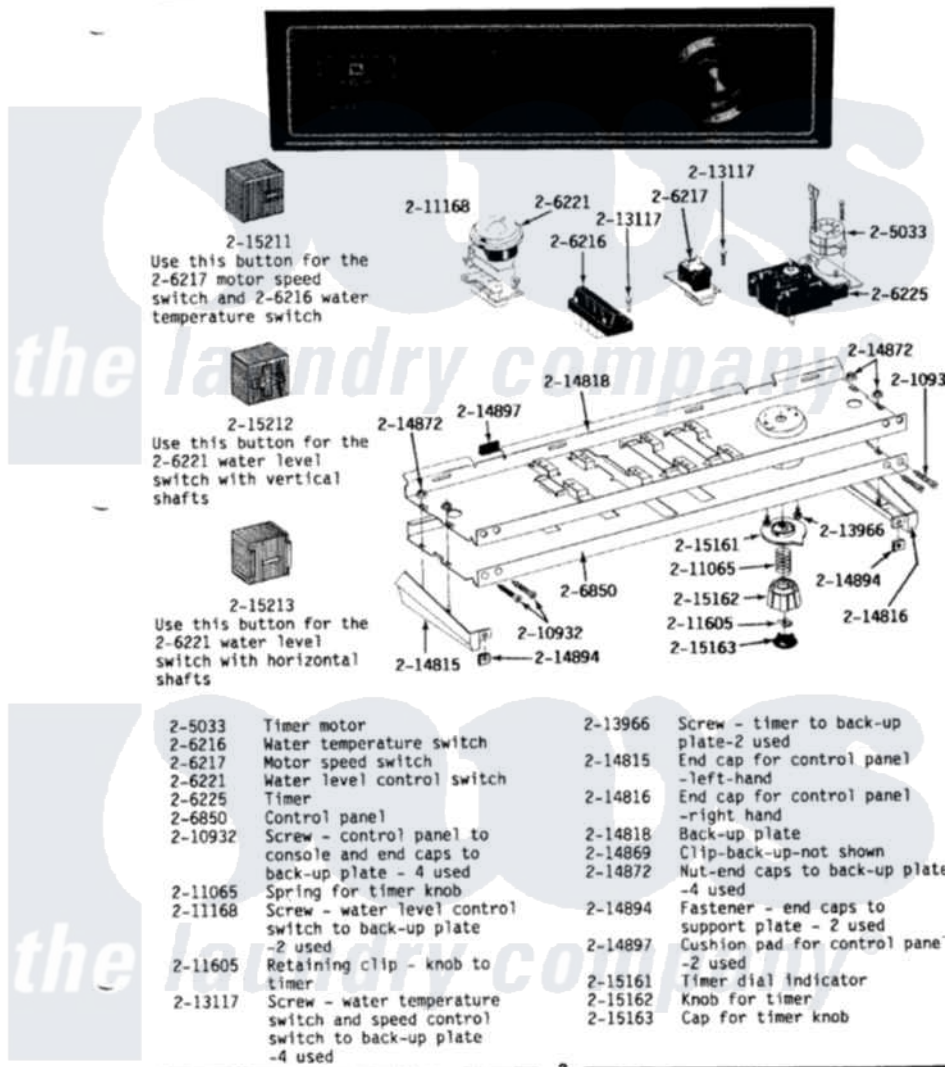

Maytag Residential Maytag A284 Washer Parts Parts Diagram 04 - CONTROL PANEL

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	22205033		Motor- Tim
2	206216			Water Temperature Switch
3	206217		Not Available	SPEED CONTROL SWITCH
4	206221		Not Available	WATER LEVEL SWITCH----NA
5	206225			Timer
6	206850		Not Available	CONTROL PANEL
7	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
8	211065			Spring, Index Wheel
9	211168	W10139210		Screw, 8-18 X 5/16
10	211605			Bezel, Timer Dial
11	213117	67006908		Screw, Ice Rack
12	213966	3400014		Screw
13	214815			End Cap F/Control Panel-LH
14	214816			End Cap F/Control Panel-RH
15	214818			Back Up Plate

NI	214869		Clip For Back Up Plate
17	214872		Nut, End Cap Note: Nut, Lamp Holder
18	214894		Fastener, End Cap
19	214897		Pad, Control Panel
20	215161	22001571	Bezel, Timer Dial
21	215162		Timer Knob
22	215163	Not Available	CAP FOR KNOB

