



[Maytag Residential Maytag A300S Washer Parts](#) Parts Diagram 06 - ELECTRICAL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200046		Not Available	CONNECTOR, FEMALE
2	<a href="#">200806</a>			Solenoid
3	<a href="#">200977</a>			Solenoid For Water Valve
4	<a href="#">201616</a>			Timer Motor
5	<a href="#">201750</a>			Timer RPR
6	201754		Not Available	PRESSURE SWITCH
7	<a href="#">201759</a>			Timer
9	<a href="#">201782</a>			Temperature Switch
10	201805	<a href="#">12002351</a>		Motor-Drve
11	<a href="#">Y201808</a>			Converter
12	<a href="#">201809</a>			Lid Switch
13	201956		Not Available	MOTOR CORD
15	202248		Not Available	MAJOR WIRE HARNESS
16	202497		Not Available	UNBALANCE LEVER
17	202497		Not Available	UNBALANCE LEVER
18	204716		Not Available	BUTTON KIT FOR 2-1754

19	204717	Not Available	BUTTON KIT FOR 2-1782
21	210175	Not Available	WIRE CONNECTOR
22	210186	<a href="#">3370225</a>	Screw
23	210442	Not Available	WASHER NYLON
24	<a href="#">211065</a>		Spring, Index Wheel
25	<a href="#">211068</a>		Wicking-Top
26	<a href="#">211223</a>		Bumper, Unbalance
27	211225	Not Available	PAD FOR UNBALANCE BUMPER
28	<a href="#">211251</a>		Screw, Transformer
29	211586	Not Available	SCREW, No.8 X 7/8 INCH
30	<a href="#">211605</a>		Bezel, Timer Dial
31	211737	<a href="#">248562</a>	Terminal
32	211835	Not Available	CONTROL KNOB - TIMER
34	212012	Not Available	TIMER DIAL
35	212062	Not Available	RECTANGULAR PLUG
36	212389	Not Available	LENS
37	212394	Not Available	CLIP FOR LAMP
38	213077	Not Available	CAP FOR TIMER KNOB

