


Maytag A308 03 - CONTROL PANEL & COMPONENTS

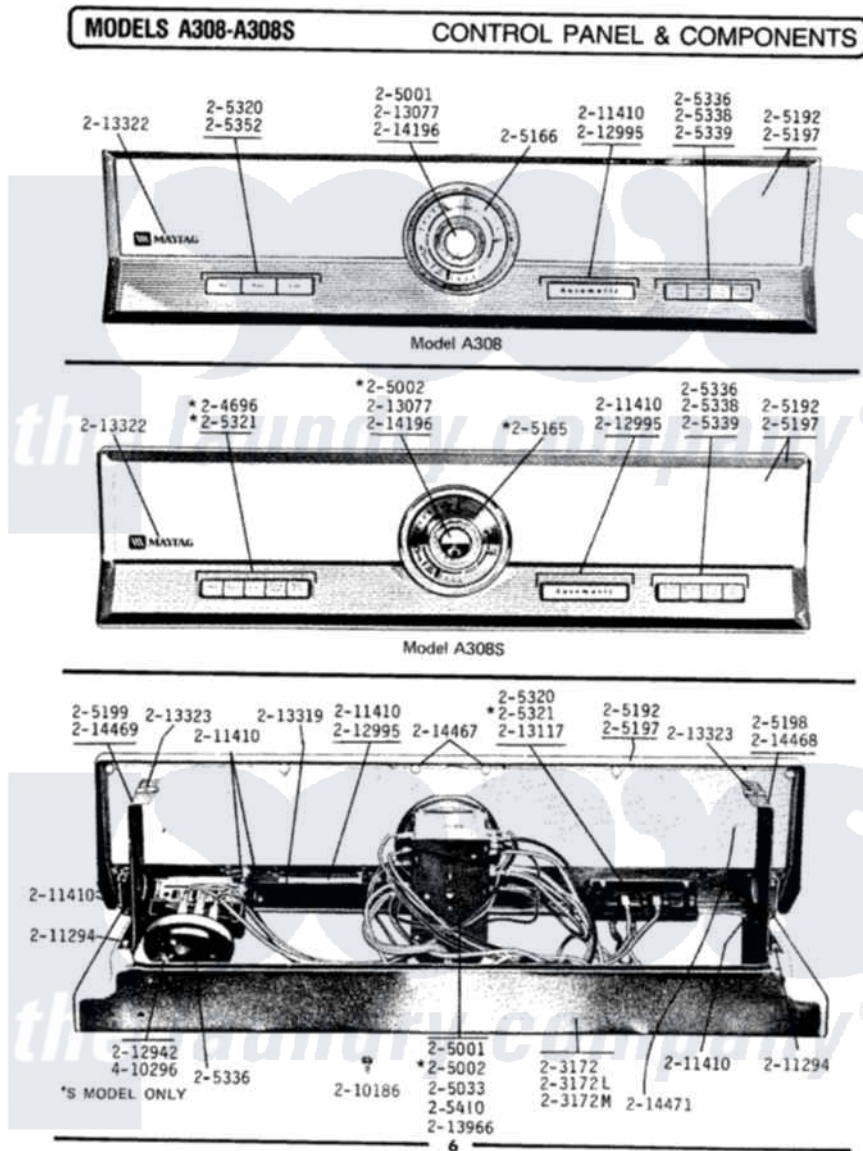

Maytag Residential Maytag A308 Washer Parts Parts Diagram 03 - CONTROL PANEL & COMPONENTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203172		Not Available	TOP COVER-WHITE
4	205001			Timer
5	205033	22205033		Motor- Tim
6	205166		Not Available	TIMER DIAL, SUN-GLOW
7	205192		Not Available	CONTROL PANEL, SUN-GLOW
8	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
9	205198		Not Available	BRACKET KIT - LEFT HAND
10	205199		Not Available	BRACKET KIT - RIGHT HAND
11	205320			Temperature Control Switch
12	205336			Water Level Switch
13	205338			Button Kit For 2-5336-1
14	205339			Button Kit For 2-5336
15	205352		Not Available	BUTTON KIT FOR 2-5320
NI	205410		Not Available	TIMER MOTOR 120-60
17	210186	3370225		Screw

18	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
19	211410			Screw, HeX Head No.8 X 3/8 Inch
20	212942	22001619		Tube, Water Level Switch
21	212995		Not Available	PLUG FOR CONTROL PANEL
22	213077		Not Available	CAP FOR TIMER KNOB
NI	213117	67006908		Screw, Ice Rack
24	213319		Not Available	FIBER SHIELD
25	213322		Not Available	MAYTAG DECAL
NI	213323			Fastener, Exhaust Duct Kit
27	213966	3400014		Screw
28	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
NI	214467		Not Available	NUT
30	214468		Not Available	BRACKET-LEFT HAND
31	214469		Not Available	BRACKET-RIGHT HAND
32	214471		Not Available	BACK-UP PLATE
33	410296	596669		Clamp, Manifold
34	211605			Bezel, Timer Dial

