


Maytag A308 05 - FRONT VIEW

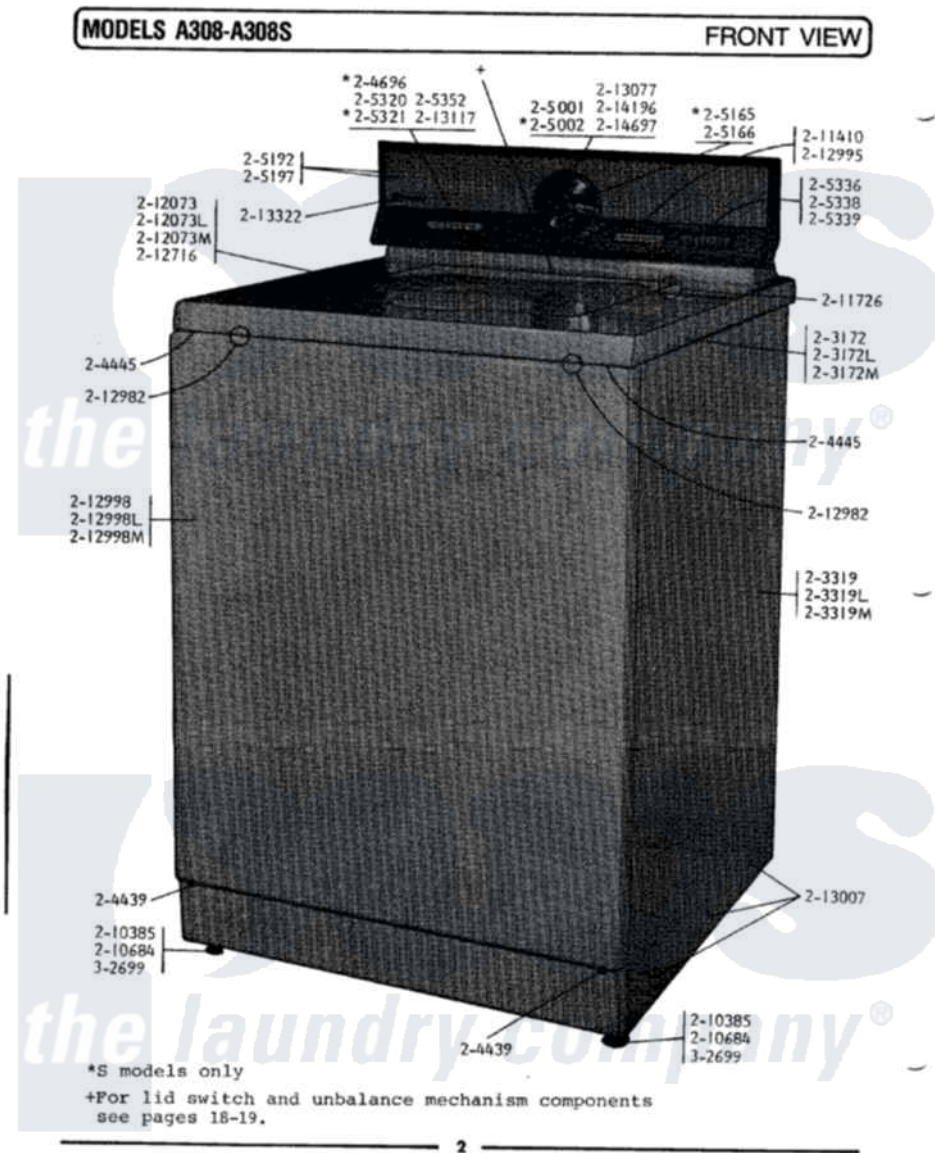

Maytag Residential Maytag A308 Washer Parts Parts Diagram 05 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203172		Not Available	TOP COVER-WHITE
4	203319	22203319		Cabinet
7	204439			Screw And Fstner Assembly
8	204445			Screw And Fastener Assembly
10	205001			Timer
13	205166		Not Available	TIMER DIAL, SUN-GLOW
14	205192		Not Available	CONTROL PANEL, SUN-GLOW
15	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
16	205320			Temperature Control Switch
18	205336			Water Level Switch
19	205338			Button Kit For 2-5336-1
20	205339			Button Kit For 2-5336
21	205352		Not Available	BUTTON KIT FOR 2-5320
22	210385			Lock Nut For Adjustable Leg
23	210684			Foot, Adjustable Leg

NI	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
25	211410			Screw, HeX Head No.8 X 3/8 Inch
26	211726			Hinge, Ball Lid
27	212073			LID (WHITE)
30	212716			Bumper, Lid
31	212982	22001650		Fastener, Spring
32	212995		Not Available	PLUG FOR CONTROL PANEL
33	212998		Not Available	PANEL, FRONT (WHT)
36	213007			Xfor Cabinet See Cabinet, Back
37	213077		Not Available	CAP FOR TIMER KNOB
38	213117	67006908		Screw, Ice Rack
39	213322		Not Available	MAYTAG DECAL
NI	213846			Guard, Belt
41	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
42	214697			Easy-Grip Knob
43	Y302699	22003428		Leg, Adjustable

