


# Maytag A308S 04 - CONTROL PANEL & COMPONENTS

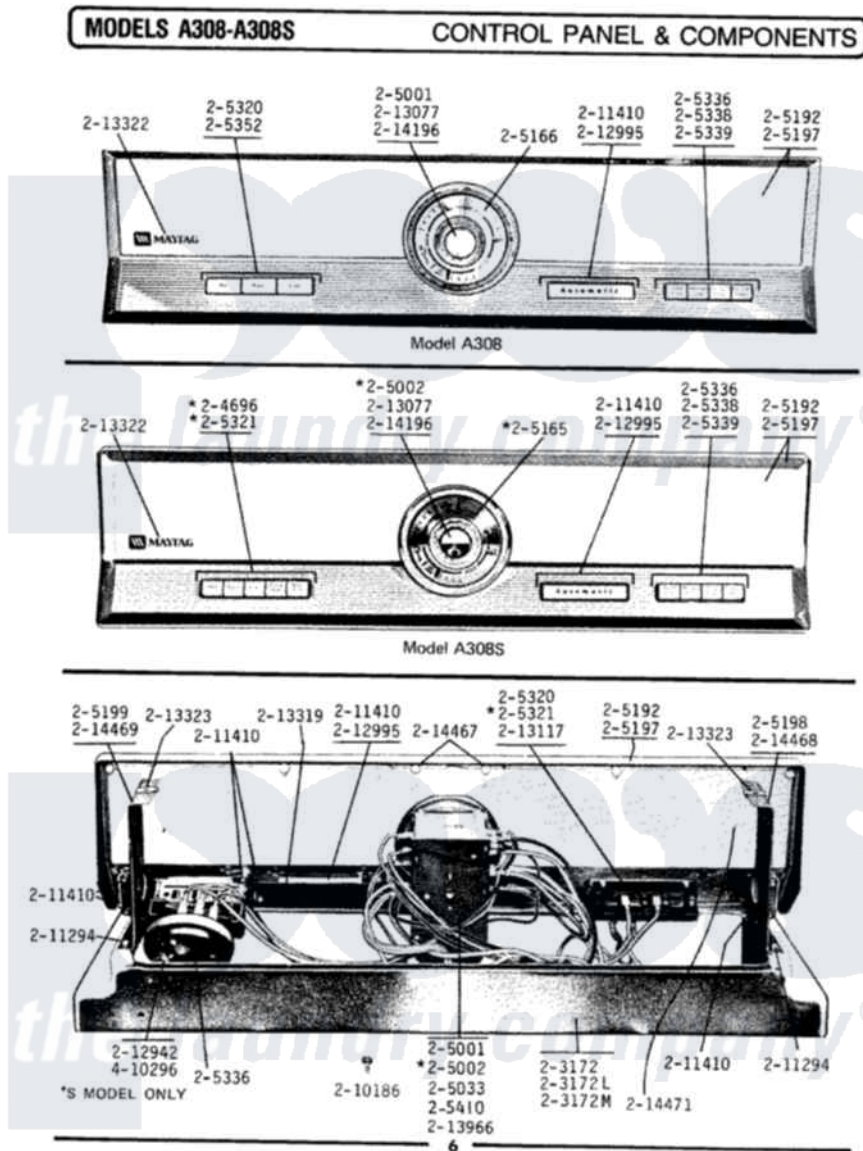

Maytag Residential Maytag A308S Washer Parts Parts Diagram 04 - CONTROL PANEL & COMPONENTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203172		Not Available	TOP COVER-WHITE
4	<a href="#">204696</a>			Button Kit For 2-3168
5	205002	<a href="#">22205002</a>		Timer
6	205033	<a href="#">22205033</a>		Motor- Tim
7	205165		Not Available	TIMER DIAL, SUN-GLOW
8	205192		Not Available	CONTROL PANEL, SUN-GLOW
9	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
10	205198		Not Available	BRACKET KIT - LEFT HAND
11	205199		Not Available	BRACKET KIT - RIGHT HAND
12	<a href="#">205320</a>			Temperature Control Switch
13	<a href="#">205336</a>			Water Level Switch
14	<a href="#">205338</a>			Button Kit For 2-5336-1
15	<a href="#">205339</a>			Button Kit For 2-5336
NI	205352		Not Available	BUTTON KIT FOR 2-5320
17	205410		Not Available	TIMER MOTOR 120-60

18	210186	<a href="#">3370225</a>		Screw
19	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
20	<a href="#">211410</a>			Screw, HeX Head No.8 X 3/8 Inch
21	212942	<a href="#">22001619</a>		Tube, Water Level Switch
22	212995		Not Available	PLUG FOR CONTROL PANEL
NI	213077		Not Available	CAP FOR TIMER KNOB
24	213117	<a href="#">67006908</a>		Screw, Ice Rack
25	213319		Not Available	FIBER SHIELD
NI	213322		Not Available	MAYTAG DECAL
27	<a href="#">213323</a>			Fastener, Exhaust Duct Kit
28	213966	<a href="#">3400014</a>		Screw
NI	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
30	214467		Not Available	NUT
31	214468		Not Available	BRACKET-LEFT HAND
32	214469		Not Available	BRACKET-RIGHT HAND
33	214471		Not Available	BACK-UP PLATE
34	410296	<a href="#">596669</a>		Clamp, Manifold

