


Maytag A310 05 - CONTROL PANEL,TIMER & SWITCHES

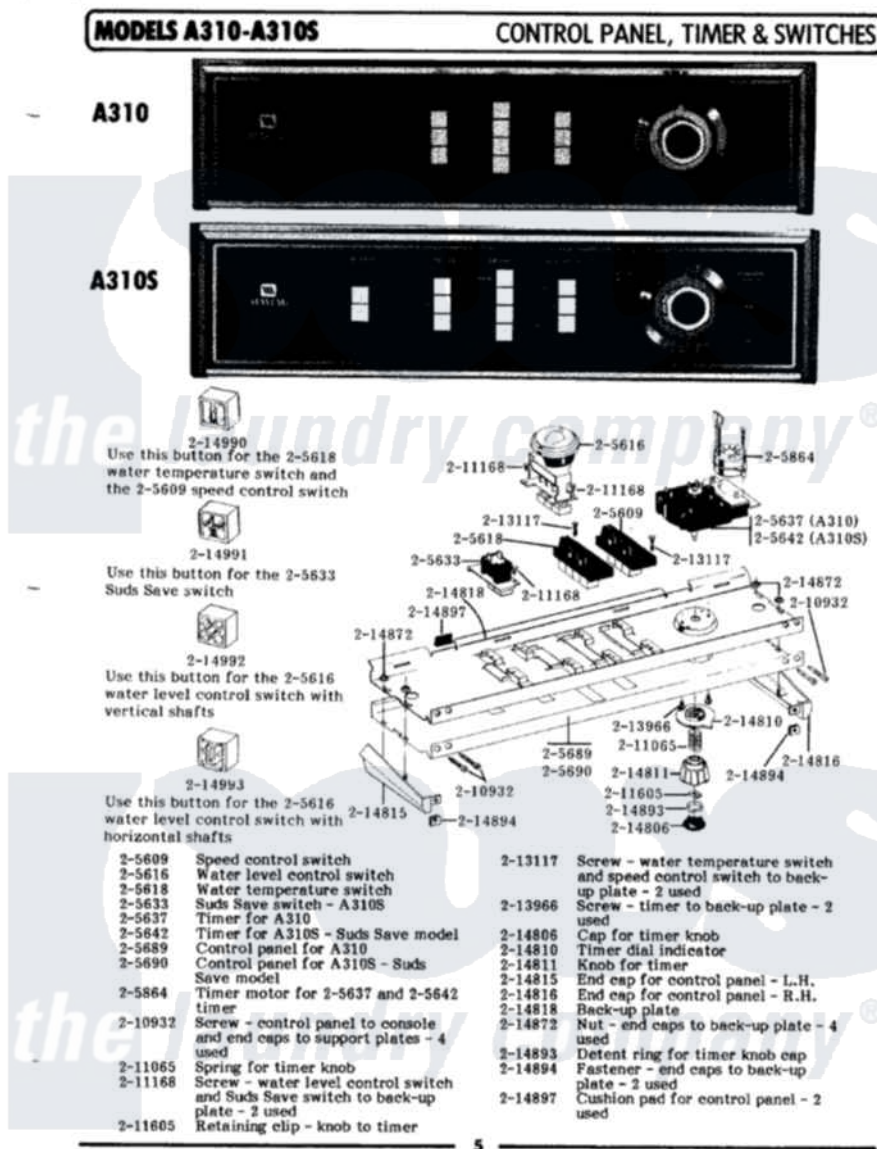

Maytag Residential Maytag A310 Washer Parts Parts Diagram 05 - CONTROL PANEL,TIMER & SWITCHES
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y205609			Speed Control Switch
2	205616			Water Level Control Switch
3	205618		Not Available	WATER TEMPERATURE SWITCH
5	205637			Timer
7	205689		Not Available	CONTROL PANEL
9	205864		Not Available	TIMER MOTOR 120-60
10	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
11	211065			Spring, Index Wheel
12	211168	W10139210		Screw, 8-18 X 5/16
13	211605			Bezel, Timer Dial
14	213117	67006908		Screw, Ice Rack
15	213966	3400014		Screw
NI	214806		Not Available	CAP FOR TIMER KNOB
17	214810	22001571		Bezel, Timer Dial
18	214811			Knob For Timer

19	214815		End Cap F/Control Panel-LH
20	214816		End Cap F/Control Panel-RH
21	214818		Back Up Plate
22	214872		Palnut, End Cap Note: Nut, Lamp Holder
23	214893	Not Available	DETENT RING F/TIMER KNOB CA
NI	214894		Fastener, End Cap
"	214897		Pad, Control Panel

