


Maytag A382 08 - TRANSMISSION-ORBITAL

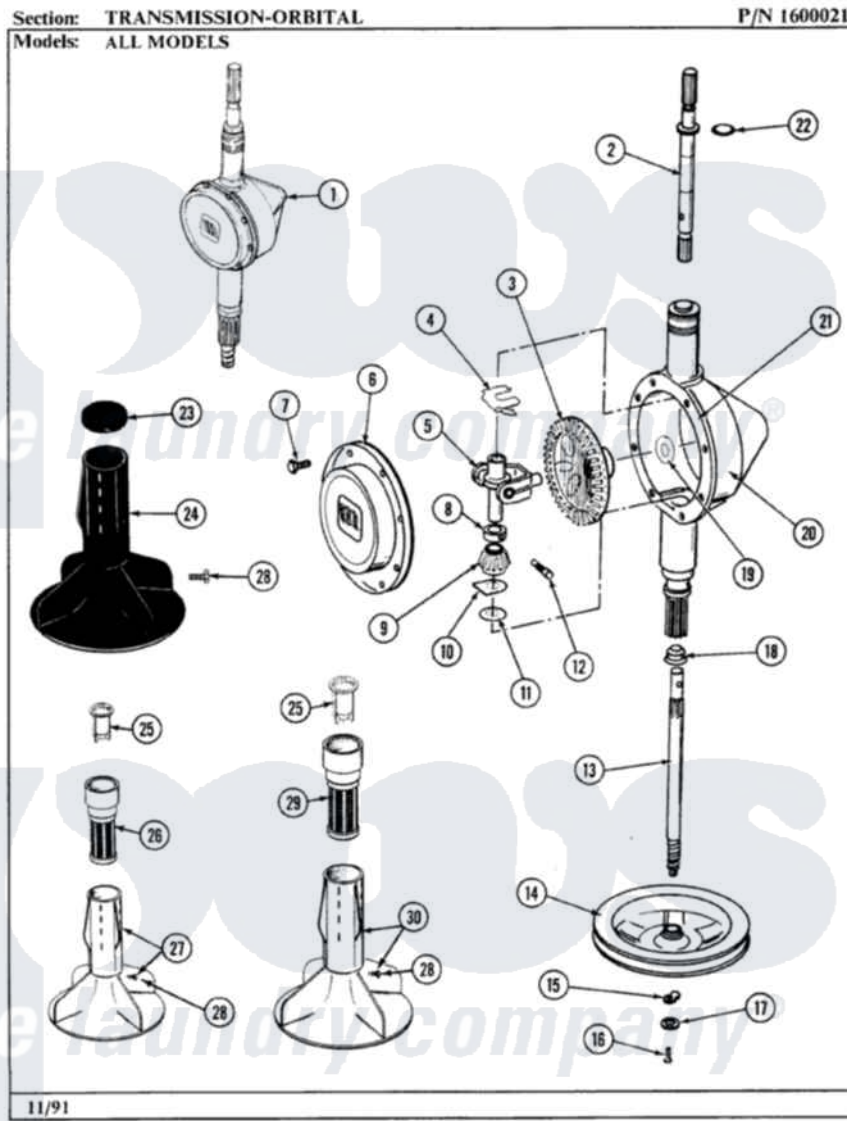

24

Maytag Residential Maytag A382 Washer Parts Parts Diagram 08 - TRANSMISSION-ORBITAL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	206707	6-2097750		Trans Dee
2	207153	6-2097820		Kit- Shaft
3	206713	6-2067130		Gear- Beve
4	215581			Spring, Agitator Shaft
5	206685	6-2066850		Yoke
6	206628			Cover, Transmission
7	215417		Not Available	SCREW, TRANSMISSION COVER
8	215415		Not Available	COLLAR, LOWER
9	215401	W10221114		Pinion
10	215395			Plate, Clutch
11	211483	6-2114830		Washer- SP
12	Y206629			Pin, Collar
13	215410	12001450		Ctr Shaft W/Collar Andkeeper- Dp
14	211059	6-2301530		Pulley
15	211089			Lug, Stop Pulley

16	211375	681582	Screw
17	211090	22003555	Washer, Stop Lug
18	206602	207843	Lip Seal Repair Kit
19	215394		Washer, Bevel Gear
20	206624	6-2097750	Trans Dee
21	Y058700	675652	Adhesive
22	210690		Seal, Rubber
25	215733		Dispensing Cup
28	206478	Not Available	SCREW & WASHER FOR AGITATOR

