

# Maytag A406S 07 - FRONT VIEW



[Maytag Residential Maytag A406S Washer Parts](#) Parts Diagram 07 - FRONT VIEW  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	203168		Not Available	SWITCH, TEMPERATURE & SUDS
3	203169	<a href="#">205336</a>		Water Level Switch
4	203172		Not Available	TOP COVER-WHITE
6	203175		Not Available	TIMER DIAL
8	203181		Not Available	TIMER
9	203319	<a href="#">22203319</a>		Cabinet
10	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
11	<a href="#">204439</a>			Screw And Fstner Assembly
14	204482		Not Available	TIMER DIAL
15	204483		Not Available	TIMER
16	<a href="#">204695</a>			Button Kit For 2-3167
17	<a href="#">204696</a>			Button Kit For 2-3168
18	<a href="#">204697</a>			Button Kit For 2-3169
19	<a href="#">204698</a>			Button Kit For 2-3169-1
20	<a href="#">205339</a>			Button Kit For 2-5336

21	<a href="#">205338</a>		Button Kit For 2-5336-1
22	<a href="#">210385</a>		Lock Nut For Adjustable Leg
23	<a href="#">210684</a>		Foot, Adjustable Leg
24	<a href="#">211252</a>		Screw, Ground Wire
25	<a href="#">211410</a>		Screw, HeX Head No.8 X 3/8 Inch
26	<a href="#">211726</a>		Hinge, Ball Lid
27	212073		LID (WHITE)
28	<a href="#">212716</a>		Bumper, Lid
29	212982	<a href="#">22001650</a>	Fastener, Spring
30	212995	Not Available	PLUG FOR CONTROL PANEL
31	212998	Not Available	PANEL, FRONT (WHT)
32	<a href="#">213007</a>		Xfor Cabinet See Cabinet, Back
33	213077	Not Available	CAP FOR TIMER KNOB
34	<a href="#">213099</a>		Lens For Control Panel
35	213117	<a href="#">67006908</a>	Screw, Ice Rack
36	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
37	213322	Not Available	MAYTAG DECAL
38	Y302699	<a href="#">22003428</a>	Leg, Adjustable
39	<a href="#">214697</a>		Easy-Grip Knob

