



[Maytag Residential Maytag A408S Washer Parts](#) Parts Diagram 07 - ELECTRICAL COMPONENTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200806			Solenoid
2	201168			Diverter Valve
3	201805	12002351		Motor-Drve
4	202770	279347		Switch-Lid
5	203177	205613		Water Valve
6	203237			No.17 Wire With Terminal
7	204590			Cord, Power
8	204888		Not Available	FILL HARNESS
10	204895			Timer
11	205169		Not Available	TIMER DIAL, SUN-GLOW
14	205262			Fabric Control Switch
15	205263		Not Available	MAIN WIRE HARNESS
16	205321			Temperature Control Switch
17	205336			Water Level Switch
18	210186	3370225		Screw
19	210745			Wire Terminal

20	211065		Spring, Index Wheel
21	211605		Bezel, Timer Dial
22	211737	248562	Terminal
23	211881		Grommet, Cord Part Not Used- Gas Models Only
24	213077	Not Available	CAP FOR TIMER KNOB
25	213501		Screw, No.6-20 X 1-1/8 Inch
26	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
27	301548		Clamp, Ground Wire
28	303846	22003781	Screw, Ground Strap
29	311155		Ground Wire And Clamp
30	313122		Screw - Baffle To Tumbler
31	Y313262	W10116752	Retainer-

the laundry company[®]

the laundry company[®]

the laundry company[®]