



[Maytag Residential Maytag A500S Washer Parts](#) Parts Diagram 06 - ELECTRICAL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200046		Not Available	CONNECTOR, FEMALE
2	<a href="#">200806</a>			Solenoid
3	<a href="#">200977</a>			Solenoid For Water Valve
4	<a href="#">201616</a>			Timer Motor
6	201754		Not Available	PRESSURE SWITCH
7	201755		Not Available	FABRIC SWITCH
8	<a href="#">201759</a>			Timer
10	<a href="#">201782</a>			Temperature Switch
11	201807	<a href="#">12002353</a>		Motor-Drve
12	<a href="#">Y201808</a>			Converter
13	<a href="#">201809</a>			Lid Switch
14	201956		Not Available	MOTOR CORD
16	202006		Not Available	MAJOR WIRE HARNESS
17	202312		Not Available	PILOT LAMP
18	202497		Not Available	UNBALANCE LEVER
19	204716		Not Available	BUTTON KIT FOR 2-1754

20	204717	Not Available	BUTTON KIT FOR 2-1782
21	204721	Not Available	BUTTON KIT
23	210175	Not Available	WIRE CONNECTOR
24	210186	<a href="#">3370225</a>	Screw
25	210442	Not Available	WASHER NYLON
26	<a href="#">211065</a>		Spring, Index Wheel
27	211168	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
28	<a href="#">211223</a>		Bumper, Unbalance
29	211225	Not Available	PAD FOR UNBALANCE BUMPER
30	<a href="#">211251</a>		Screw, Transformer
31	211586	Not Available	SCREW, No.8 X 7/8 INCH
32	<a href="#">211605</a>		Bezel, Timer Dial
33	211737	<a href="#">248562</a>	Terminal
34	211792	Not Available	PIN
35	211794	Not Available	SCREW-LID SWITCH TO BRACKET
36	211835	Not Available	CONTROL KNOB - TIMER
38	212012	Not Available	TIMER DIAL
39	212336	Not Available	SCREW, No.8 X 3/4 INCH
40	212389	Not Available	LENS
41	212394	Not Available	CLIP FOR LAMP
42	213077	Not Available	CAP FOR TIMER KNOB

