 



# Maytag A510S 04 - CONTROL PANEL, TIMER & SWITCHES

## MODELS A510-A510S CONTROL PANEL, TIMER & SWITCHES

A510

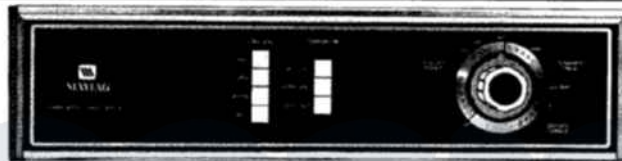

 A510S

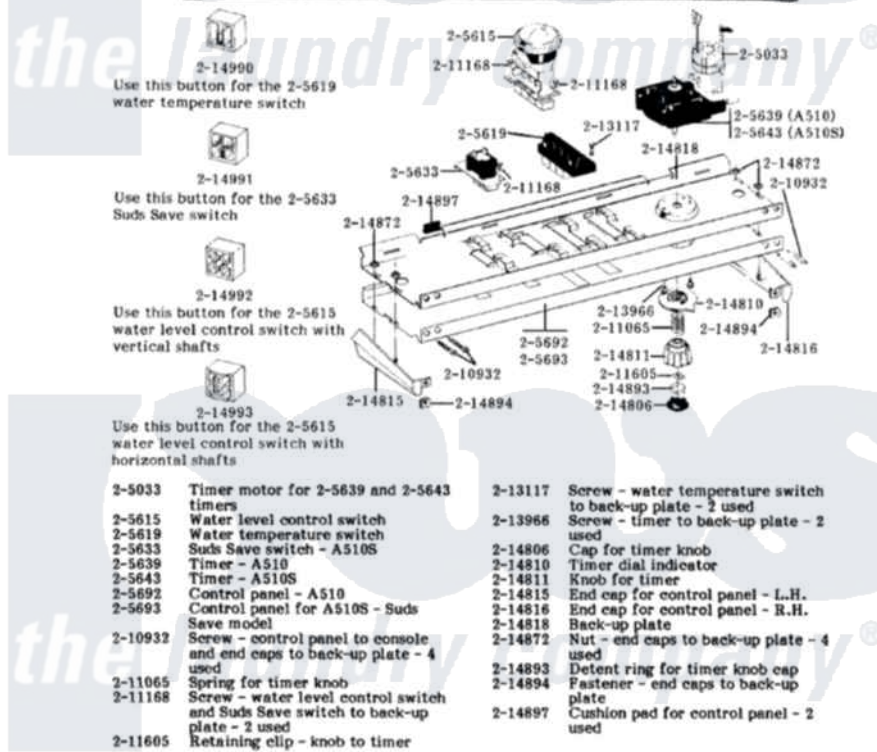

Maytag Residential Maytag A510S Washer Parts Parts Diagram 04 - CONTROL PANEL, TIMER & SWITCHES

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	<a href="#">22205033</a>		Motor- Tim
2	<a href="#">205615</a>			Water Level Control Switch
3	205619		Not Available	WATER TEMPERATURE SWITCH
4	<a href="#">205633</a>			Suds Save Switch
6	<a href="#">205643</a>			Timer
8	205693		Not Available	CONTROL PANEL
9	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
10	<a href="#">211065</a>			Spring, Index Wheel
11	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
12	<a href="#">211605</a>			Bezel, Timer Dial
13	213117	<a href="#">67006908</a>		Screw, Ice Rack
14	213966	<a href="#">3400014</a>		Screw
15	214806		Not Available	CAP FOR TIMER KNOB
16	214810	<a href="#">22001571</a>		Bezel, Timer Dial
17	<a href="#">214811</a>			Knob For Timer

18	<a href="#">214815</a>		End Cap F/Control Panel-LH
19	<a href="#">214816</a>		End Cap F/Control Panel-RH
20	<a href="#">214818</a>		Back Up Plate
21	<a href="#">214872</a>		Palnut, End Cap Note: Nut, Lamp Holder
NI	214893	Not Available	DETENT RING F/TIMER KNOB CA
"	<a href="#">214894</a>		Fastener, End Cap
"	<a href="#">214897</a>		Pad, Control Panel

