


Maytag A511S 04 - CONTROL PANEL, TIMER & SWITCHES

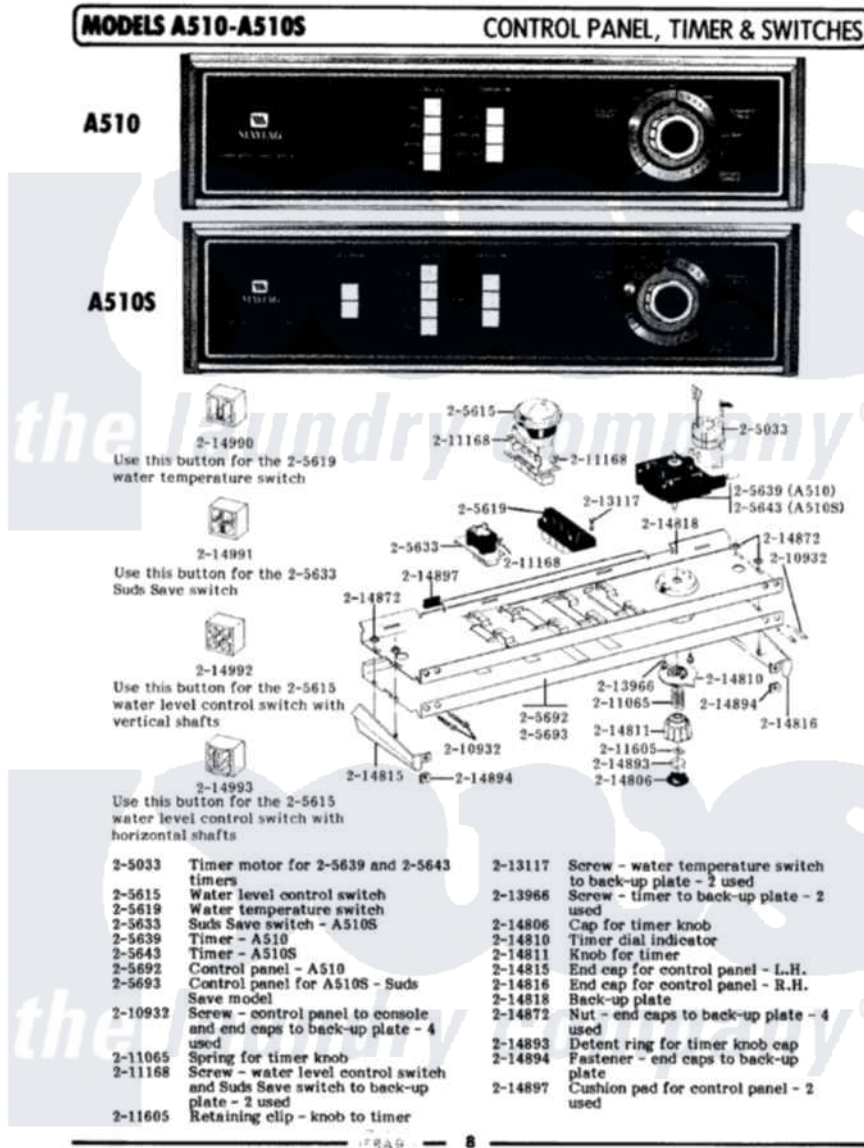

Maytag Residential Maytag A511S Washer Parts Parts Diagram 04 - CONTROL PANEL, TIMER & SWITCHES
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205410		Not Available	TIMER MOTOR 120-60
2	205611			Fabric Control Switch
3	205615			Water Level Control Switch
4	205618		Not Available	WATER TEMPERATURE SWITCH
NI	205639			Timer
6	205694		Not Available	CONTROL PANEL
7	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
8	211065			Spring, Index Wheel
9	211168	W10139210		Screw, 8-18 X 5/16
10	211605			Bezel, Timer Dial
11	213117	67006908		Screw, Ice Rack
12	213966	3400014		Screw
13	214806		Not Available	CAP FOR TIMER KNOB
14	214810	22001571		Bezel, Timer Dial
15	214811			Knob For Timer

16	214815		End Cap F/Control Panel-LH
17	214816		End Cap F/Control Panel-RH
18	214818		Back Up Plate
19	214872		Palnut, End Cap Note: Nut, Lamp Holder
20	214893	Not Available	DETENT RING F/TIMER KNOB CA
21	214894		Fastener, End Cap
NI	214897		Pad, Control Panel
"	205161	489503	Clamp
"	205537		Top Cover-White
"	214433		Tube, Inlet Part Not Used
"	214434		Spout, Deflector
"	214436		Gasket
"	214437	215577	Bleach Inlet White

