


Maytag A608S 08 - FRONT VIEW

2

MODELS A608-A608S

SPECIFY COLOR IF OTHER THAN WHITE

FRONT VIEW

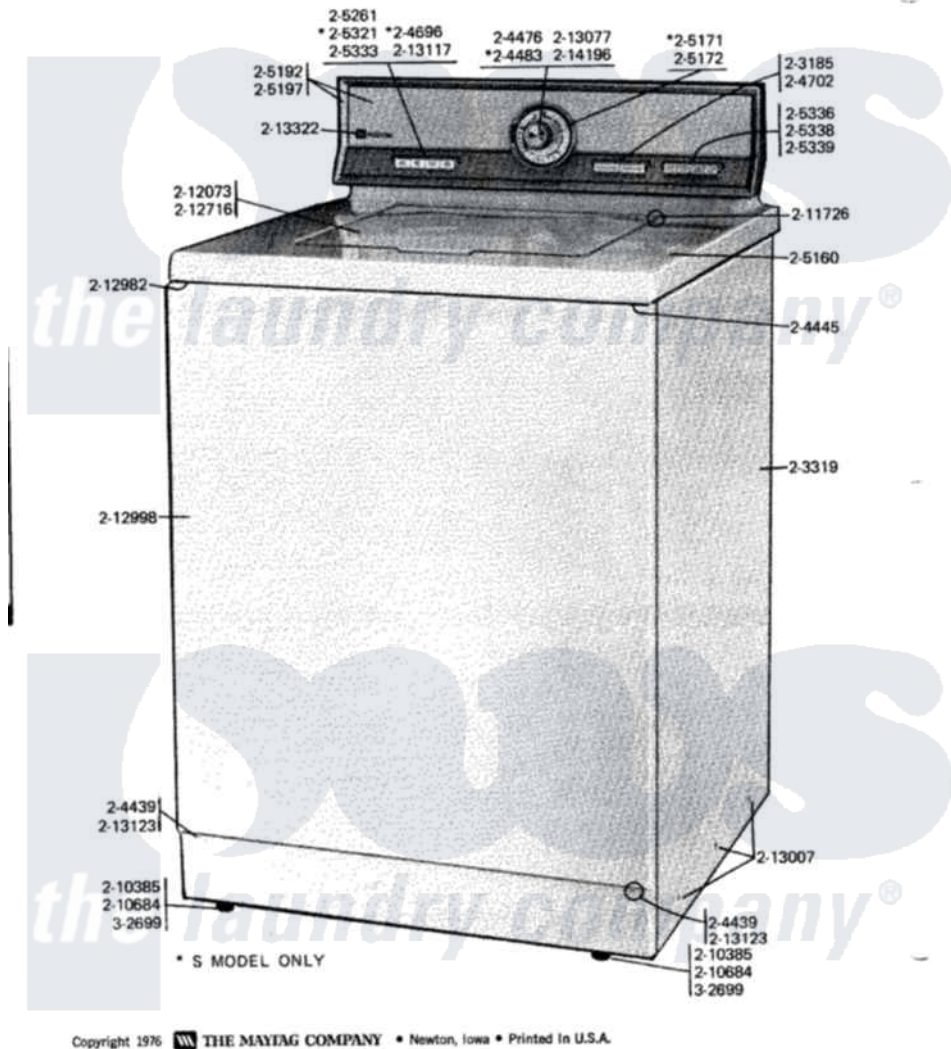

Copyright 1976 THE MAYTAG COMPANY • Newton, Iowa • Printed in U.S.A.

Maytag Residential Maytag A608S Washer Parts Parts Diagram 08 - FRONT VIEW

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203185		Not Available	FABRIC SWITCH
2	203319	22203319		Cabinet
3	204439			Screw And Fstner Assembly
4	204445			Screw And Fastener Assembly
5	204483		Not Available	TIMER
6	204696			Button Kit For 2-3168
7	204702		Not Available	BUTTON KIT FOR 2-3185
8	205160		Not Available	TOP COVER-WHITE
9	205171		Not Available	TIMER DIAL, SUN-GLOW
10	205192		Not Available	CONTROL PANEL, SUN-GLOW
11	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
12	205321			Temperature Control Switch
13	205333		Not Available	BUTTON KIT FOR 2-5261
14	205336			Water Level Switch
15	205338			Button Kit For 2-5336-1

16	205339		Button Kit For 2-5336
17	210385		Lock Nut For Adjustable Leg
18	210684		Foot, Adjustable Leg
19	211726		Hinge, Ball Lid
20	212073		LID (WHITE)
NI	212277		Screw, No.8 X 1/2 Inch
22	212716		Bumper, Lid
23	212982	22001650	Fastener, Spring
24	212998	Not Available	PANEL, FRONT (WHT)
25	213007		Xfor Cabinet See Cabinet, Back
26	213077	Not Available	CAP FOR TIMER KNOB
27	213117	67006908	Screw, Ice Rack
28	213123	22001496	Front Panel Fastener And Screw
29	213322	Not Available	MAYTAG DECAL
30	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
31	Y302699	22003428	Leg, Adjustable

