



[Maytag Residential Maytag A700 Washer Parts](#) Parts Diagram 01 - 115-230 VOLT, 50 CYCLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	202160		Not Available	MOTOR 120-50
2	<a href="#">Y202496</a>			Pulley, Motor
3	211709		Not Available	MOTOR STOP
4	<a href="#">211948</a>			V Belt, Drive Pulley
5	<a href="#">211451</a>			Belt, Pump
6	<a href="#">201408</a>			Capacitor 120-50
7	201628		Not Available	BALLAST
8	201110		Not Available	WIRE CONNECTOR
9	216321		Not Available	TIMER
11	203082		Not Available	TIMER MOTOR 120-50
12	201700	<a href="#">WB44X139</a>		Broil Unit
13	202159		Not Available	MOTOR 240-50
14	<a href="#">Y202496</a>			Pulley, Motor
15	211709		Not Available	MOTOR STOP
16	<a href="#">211948</a>			V Belt, Drive Pulley
17	<a href="#">211451</a>			Belt, Pump

18	<a href="#">201101</a>		Capacitor
19	201621	Not Available	BALLAST
20	201110	Not Available	WIRE CONNECTOR
21	202630	Not Available	LAMP
22	202630	Not Available	LAMP
23	201449	Not Available	WATER VALVE
24	<a href="#">201848</a>		Solenoid 240-50
25	201104	Not Available	SOLENOID 240-50
26	216361	Not Available	TIMER
28	203083	Not Available	TIMER MOTOR 240-50
29	201700	<a href="#">WB44X139</a>	Broil Unit
30	<a href="#">200803</a>		Green Wire, Motor To Capacitor
31	<a href="#">211149</a>		Clip, Capacitor

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>