



[Maytag Residential Maytag A700 Washer Parts Parts Diagram 03 - BLEACH DISPENSER](#)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	201471		Not Available	LAMP SOCKET AND SEAL
2	201475			Shut-Off Switch
3	201476		Not Available	WIRE HARNESS FOR FILL SWITCH
4	201624		Not Available	OUTER TUB
5	201626		Not Available	TOP COVER-WHITE
6	201778		Not Available	TUB COVER WITH WINDOW
7	202532	6-2022030		Pump As Pa
8	203774			Bleach Tank Assembly
9	211003		Not Available	BRACKET
10	211017	31001575		Bulb, Cylinder Light
11	211500			Washer, Bracket To Top Cover
12	211719		Not Available	UNBALANCE LEVER
13	211722		Not Available	ARK-LESS TERMINAL
14	211723		Not Available	WINDOW FOR TUB
15	211726			Hinge, Ball Lid
16	211741	203774		Bleach Tank Assembly

17	211742		Strainer
18	211904	212981	Transfer Tube
19	211905		Seal
20	211906	Not Available	BLEACH INLET
21	211910		Fill Tube
22	211912	Not Available	DELIVERY TUBE
23	211913	Not Available	DISPENSER CUP
24	211915	Not Available	FASTENER
25	211967	211410	Screw, HeX Head No.8 X 3/8 Inch
26	212278	Not Available	COUPLING
27	212624	Not Available	COVER FOR PUMP
28	400179	201575	Clamp, Hose
29	053759	25-7614	Screw

