



[Maytag Residential Maytag A700 Washer Parts](#) Parts Diagram 08 - MACHINE COMPLETE
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200862		Not Available	BALLAST
2	200863			Fluorescent Lamp
3	201163			Water Valve
6	201189			Lower Transmission Housing
7	201228		Not Available	CABINET
8	201230			Timer
9	201379		Not Available	AGITATOR - BLACK
10	201476		Not Available	WIRE HARNESS FOR FILL SWITCH
11	201580		Not Available	SWITCH FOR FLUORESCENT LAMP
13	201599		Not Available	MAJOR WIRE HARNESS
14	201626		Not Available	TOP COVER-WHITE
15	201754		Not Available	PRESSURE SWITCH
16	201755		Not Available	FABRIC SWITCH
17	201790			Temp. Control Switch, Gray
18	201807	12002353		Motor-Drve

20	201960		Not Available	COVER FOR CONTROL PANEL
21	202313		Not Available	FRONT PANEL ASSEMBLY
22	202317			Rinse Knob-White
23	202318			Rinse Switch W/Wires
24	202324		Not Available	3A WIRE
26	Y202734	215058		Pad, Cabinet Bumper
27	203057		Not Available	FILTER W/SEAL
28	204445			Screw And Fastener Assembly
29	204716		Not Available	BUTTON KIT FOR 2-1754
30	204719		Not Available	BUTTON KIT FOR 2-1790
32	204721		Not Available	BUTTON KIT
33	210310	31001575		Bulb, Cylinder Light
34	210385			Lock Nut For Adjustable Leg
35	210464		Not Available	CLIP, GROUND
36	210609			Nylon Washer
37	210684			Foot, Adjustable Leg
38	210865		Not Available	FASTENER
39	210874	22001496		Front Panel Fastener And Screw
40	210887	12990527		Screw-Sm/Hex
41	210955		Not Available	TINNERMAN, TOP COVER TO CAB.
42	211017	31001575		Bulb, Cylinder Light
43	211065			Spring, Index Wheel
44	211244		Not Available	GASKET
45	211251			Screw, Transformer
46	211293		Not Available	SCREW, No.8 X 1/2 INCH
47	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
48	211512		Not Available	WASHER
49	211702		Not Available	CLIP
50	211725		Not Available	LID-WHITE
51	211726			Hinge, Ball Lid
52	211729			Nylon Button
53	211739			Screw, Cabinet To Base
54	211836		Not Available	CONTROL KNOB - T
55	211914			Bumper For Lid-Gray
56	211962			Spring Clip
57	211963		Not Available	FASTENER
58	212014		Not Available	MEDALLION
59	212026		Not Available	CORD HOLDER IN BASE FRAME
60	212057		Not Available	GLASS PANEL-R.H.-GOLD
61	212058		Not Available	GLASS PANEL-L.H.-GOLD
62	212059		Not Available	CONTROL PANEL
64	212061		Not Available	TIMER DIAL-GRAY
65	212083		Not Available	BRACKET FOR RINSE SWITCH
66	212128		Not Available	INDICATOR BUTTON
67	212221		Not Available	PALNUT-RINSE SWITCH BRKT-BASE
68	212275		Not Available	SCREW, CABINET TO BASE
69	212396		Not Available	TRIM STRIP
70	212716			Bumper, Lid

71	213077	Not Available	CAP FOR TIMER KNOB
72	300552	Not Available	LAMP SOCKET
73	310207		Screw, No.6 X 1/4 Inch
74	310219		No.10z Fastener
75	310934	22003428	Leg, Adjustable
76	052727	Not Available	HEX. NUT, 1/4-28

