



[Maytag Residential Maytag A700S Washer Parts](#) Parts Diagram 01 - 115-230 VOLT, 50 CYCLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	202160		Not Available	MOTOR 120-50
2	Y202496			Pulley, Motor
3	211709		Not Available	MOTOR STOP
4	211948			V Belt, Drive Pulley
5	211451			Belt, Pump
6	201408			Capacitor 120-50
7	201628		Not Available	BALLAST
8	201110		Not Available	WIRE CONNECTOR
10	216381		Not Available	TIMER
11	203082		Not Available	TIMER MOTOR 120-50
12	201700	WB44X139		Broil Unit
13	202159		Not Available	MOTOR 240-50
14	Y202496			Pulley, Motor
15	211709		Not Available	MOTOR STOP
16	211948			V Belt, Drive Pulley
17	211451			Belt, Pump

18	201101		Capacitor
19	201621	Not Available	BALLAST
20	201110	Not Available	WIRE CONNECTOR
21	202630	Not Available	LAMP
22	202630	Not Available	LAMP
23	201449	Not Available	WATER VALVE
24	201848		Solenoid 240-50
25	201104	Not Available	SOLENOID 240-50
27	216341	8316810	Tube-Drain
28	203083	Not Available	TIMER MOTOR 240-50
29	201700	WB44X139	Broil Unit
30	200803		Green Wire, Motor To Capacitor
31	211149		Clip, Capacitor

the laundry company[®]

the laundry company[®]

the laundry company[®]