



[Maytag Residential Maytag A700S Washer Parts](#) Parts Diagram 06 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	200862		Not Available	BALLAST
2	200863			Fluorescent Lamp
3	200996		Not Available	TIMER MOTOR, A
4	201166		Not Available	TIMER
6	201423			Receptacle
7	201580		Not Available	SWITCH FOR FLUORESCENT LAMP
8	201700	WB44X139		Broil Unit
9	201754		Not Available	PRESSURE SWITCH
11	201790			Temp. Control Switch, Gray
12	201837	201060		Switch
13	201960		Not Available	COVER FOR CONTROL PANEL
14	202317			Rinse Knob-White
15	202318			Rinse Switch W/Wires
16	202807		Not Available	RECEPT FOR FLUORESCENT LAMP

17	204716	Not Available	BUTTON KIT FOR 2-1754
18	204719	Not Available	BUTTON KIT FOR 2-1790
19	204720	Not Available	BUTTON KIT FOR 2-1837
21	210310	31001575	Bulb, Cylinder Light
22	211065		Spring, Index Wheel
23	211168	W10139210	Screw, 8-18 X 5/16
24	211238	Not Available	PANEL BRACKET, LEFT
25	211239	Not Available	PANEL BRACKET, RIGHT
26	211244	Not Available	GASKET
27	211246	Not Available	SPRING CLIP
28	211247	Not Available	RETAINER
29	211249	Not Available	FASTENER
30	211250		Fastener
31	211251		Screw, Transformer
32	211252		Screw, Ground Wire
33	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
34	211512	Not Available	WASHER
35	211676	Not Available	BRACKET
36	211719	Not Available	UNBALANCE LEVER
37	211836	Not Available	CONTROL KNOB - T
38	212057	Not Available	GLASS PANEL-R.H.-GOLD
39	212058	Not Available	GLASS PANEL-L.H.-GOLD
40	212059	Not Available	CONTROL PANEL
41	212060	Not Available	TIMER DIAL-GRAY
43	212084	Not Available	BRACKET FOR SUDS SWITCH
44	212084	Not Available	BRACKET FOR SUDS SWITCH
45	212221	Not Available	PALNUT-RINSE SWITCH BRKT-BASE
46	213077	Not Available	CAP FOR TIMER KNOB
47	300552	Not Available	LAMP SOCKET
48	310744	Not Available	SCREW-LAMP RECEPTACLE TO BRACK
49	311259	Not Available	SCREW, No.4-36 X 1/2 INCH
50	052727	Not Available	HEX. NUT, 1/4-28

