



[Maytag Residential Maytag A700S Washer Parts](#) Parts Diagram 08 - MACHINE COMPLETE  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200862		Not Available	BALLAST
2	<a href="#">200863</a>			Fluorescent Lamp
3	<a href="#">201163</a>			Water Valve
4	201166		Not Available	TIMER
5	<a href="#">201168</a>			Diverter Valve
6	<a href="#">201189</a>			Lower Transmission Housing
7	201228		Not Available	CABINET
9	201379		Not Available	AGITATOR - BLACK
10	201476		Not Available	WIRE HARNESS FOR FILL SWITCH
11	201580		Not Available	SWITCH FOR FLUORESCENT LAMP
12	201591		Not Available	MAJOR WIRE HARNESS
14	201626		Not Available	TOP COVER-WHITE
15	201754		Not Available	PRESSURE SWITCH
17	<a href="#">201790</a>			Temp. Control Switch, Gray
18	201807	<a href="#">12002353</a>		Motor-Drve

19	201837	<a href="#">201060</a>		Switch
20	201960		Not Available	COVER FOR CONTROL PANEL
21	202313		Not Available	FRONT PANEL ASSEMBLY
22	<a href="#">202317</a>			Rinse Knob-White
23	<a href="#">202318</a>			Rinse Switch W/Wires
25	202325		Not Available	3A & No.10 WIRE HARNESS
26	Y202734	<a href="#">215058</a>		Pad, Cabinet Bumper
27	203057		Not Available	FILTER W/SEAL
28	<a href="#">204445</a>			Screw And Fastener Assembly
29	204716		Not Available	BUTTON KIT FOR 2-1754
30	204719		Not Available	BUTTON KIT FOR 2-1790
31	204720		Not Available	BUTTON KIT FOR 2-1837
33	210310	<a href="#">31001575</a>		Bulb, Cylinder Light
34	<a href="#">210385</a>			Lock Nut For Adjustable Leg
35	210464		Not Available	CLIP, GROUND
36	<a href="#">210609</a>			Nylon Washer
37	<a href="#">210684</a>			Foot, Adjustable Leg
38	210865		Not Available	FASTENER
39	210874	<a href="#">22001496</a>		Front Panel Fastener And Screw
40	210887	<a href="#">12990527</a>		Screw-Sm/Hex
41	210955		Not Available	TINNERMAN, TOP COVER TO CAB.
42	211017	<a href="#">31001575</a>		Bulb, Cylinder Light
43	<a href="#">211065</a>			Spring, Index Wheel
44	211244		Not Available	GASKET
45	<a href="#">211251</a>			Screw, Transformer
46	211293		Not Available	SCREW, No.8 X 1/2 INCH
47	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
48	211512		Not Available	WASHER
49	211702		Not Available	CLIP
50	211725		Not Available	LID-WHITE
51	<a href="#">211726</a>			Hinge, Ball Lid
52	<a href="#">211729</a>			Nylon Button
53	<a href="#">211739</a>			Screw, Cabinet To Base
54	211836		Not Available	CONTROL KNOB - T
55	<a href="#">211914</a>			Bumper For Lid-Gray
56	<a href="#">211962</a>			Spring Clip
57	211963		Not Available	FASTENER
58	212014		Not Available	MEDALLION
59	212026		Not Available	CORD HOLDER IN BASE FRAME
60	212057		Not Available	GLASS PANEL-R.H.-GOLD
61	212058		Not Available	GLASS PANEL-L.H.-GOLD
62	212059		Not Available	CONTROL PANEL
63	212060		Not Available	TIMER DIAL-GRAY
65	212083		Not Available	BRACKET FOR RINSE SWITCH
66	212128		Not Available	INDICATOR BUTTON
67	212221		Not Available	PALNUT-RINSE SWITCH BRKT-BASE
68	212275		Not Available	SCREW, CABINET TO BASE
69	212396		Not Available	TRIM STRIP

70	<a href="#">212716</a>		Bumper, Lid
71	213077	Not Available	CAP FOR TIMER KNOB
72	300552	Not Available	LAMP SOCKET
73	<a href="#">310207</a>		Screw, No.6 X 1/4 Inch
74	<a href="#">310219</a>		No.10z Fastener
75	310934	<a href="#">22003428</a>	Leg, Adjustable
76	052727	Not Available	HEX. NUT, 1/4-28

