



[Maytag Residential Maytag A702 Washer Parts Parts Diagram 03 - BLEACH DISPENSER](#)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	201471		Not Available	LAMP SOCKET AND SEAL
2	201624		Not Available	OUTER TUB
3	201626		Not Available	TOP COVER-WHITE
4	201699			Bleach Inlet With Strainer
5	201778		Not Available	TUB COVER WITH WINDOW
6	202532	6-2022030		Pump As Pa
7	202797		Not Available	WIRE HARNESS FOR FILL SWITCH
8	203774			Bleach Tank Assembly
9	211003		Not Available	BRACKET
10	211017	31001575		Bulb, Cylinder Light
11	211223			Bumper, Unbalance
12	211225		Not Available	PAD FOR UNBALANCE BUMPER
13	211500			Washer, Bracket To Top Cover
14	211676		Not Available	BRACKET
15	211702		Not Available	CLIP

16	211719		Not Available	UNBALANCE LEVER
17	211722		Not Available	ARK-LESS TERMINAL
18	211723		Not Available	WINDOW FOR TUB
19	211726			Hinge, Ball Lid
20	211741	203774		Bleach Tank Assembly
21	211742			Strainer
22	211904	212981		Transfer Tube
23	211905			Seal
24	211912		Not Available	DELIVERY TUBE
25	211913		Not Available	DISPENSER CUP
26	211915		Not Available	FASTENER
27	211967	211410		Screw, HeX Head No.8 X 3/8 Inch
28	212624		Not Available	COVER FOR PUMP
29	400179	201575		Clamp, Hose
30	053759	25-7614		Screw

