



[Maytag Residential Maytag A702S Washer Parts](#) Parts Diagram 03 - BLEACH DISPENSER
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	201471		Not Available	LAMP SOCKET AND SEAL
2	201624		Not Available	OUTER TUB
3	201626		Not Available	TOP COVER-WHITE
4	201699			Bleach Inlet With Strainer
5	201778		Not Available	TUB COVER WITH WINDOW
6	202532	6-2022030		Pump As Pa
7	202797		Not Available	WIRE HARNESS FOR FILL SWITCH
8	203774			Bleach Tank Assembly
9	211003		Not Available	BRACKET
10	211017	31001575		Bulb, Cylinder Light
11	211223			Bumper, Unbalance
12	211225		Not Available	PAD FOR UNBALANCE BUMPER
13	211500			Washer, Bracket To Top Cover
14	211676		Not Available	BRACKET
15	211702		Not Available	CLIP

16	211719	Not Available	UNBALANCE LEVER
17	211722	Not Available	ARK-LESS TERMINAL
18	211723	Not Available	WINDOW FOR TUB
19	211726		Hinge, Ball Lid
20	211741	203774	Bleach Tank Assembly
21	211742		Strainer
22	211904	212981	Transfer Tube
23	211905		Seal
24	211912	Not Available	DELIVERY TUBE
25	211913	Not Available	DISPENSER CUP
26	211915	Not Available	FASTENER
27	211967	211410	Screw, HeX Head No.8 X 3/8 Inch
28	212624	Not Available	COVER FOR PUMP
29	400179	201575	Clamp, Hose
30	053759	25-7614	Screw

