


# Maytag A710 04 - CONTROL PANEL,TIMER & SWITCHES

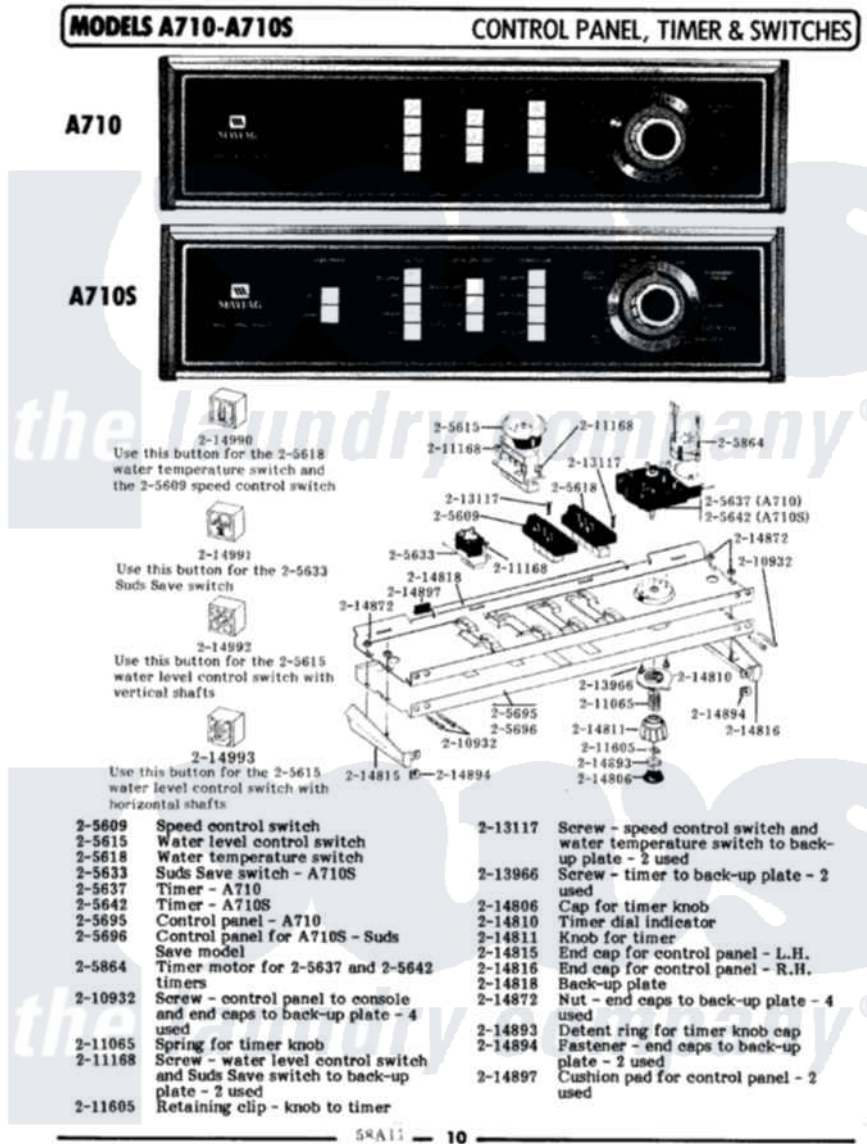

Maytag Residential Maytag A710 Washer Parts Parts Diagram 04 - CONTROL PANEL,TIMER & SWITCHES  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">214990</a>			Button For Switch
"	<a href="#">Y205609</a>			Speed Control Switch
2	214992	<a href="#">215212</a>		Button For Switch
"	<a href="#">205615</a>			Water Level Control Switch
"	<a href="#">214993</a>			Button For Switch
3	<a href="#">214990</a>			Button For Switch
"	205618		Not Available	WATER TEMPERATURE SWITCH
4	<a href="#">214991</a>			Button For Switch
5	<a href="#">205637</a>			Timer
6	<a href="#">205695</a>			Control Panel
7	205864		Not Available	TIMER MOTOR 120-60
8	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
9	<a href="#">211065</a>			Spring, Index Wheel
10	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
11	<a href="#">211605</a>			Bezel, Timer Dial

12	213117	<a href="#">67006908</a>		Screw, Ice Rack
13	213966	<a href="#">3400014</a>		Screw
14	214806		Not Available	CAP FOR TIMER KNOB
15	214810	<a href="#">22001571</a>		Bezel, Timer Dial
16	<a href="#">214811</a>			Knob For Timer
17	<a href="#">214815</a>			End Cap F/Control Panel-LH
18	<a href="#">214816</a>			End Cap F/Control Panel-RH
19	<a href="#">214818</a>			Back Up Plate
20	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
21	214893		Not Available	DETENT RING F/TIMER KNOB CA
22	<a href="#">214894</a>			Fastener, End Cap
23	<a href="#">214897</a>			Pad, Control Panel

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>