


# Maytag A7500W 04 - CONTROL PANEL

SECTION: CONTROL PANEL  
 MODEL: A7500 A7500S A7500W SERIES 01

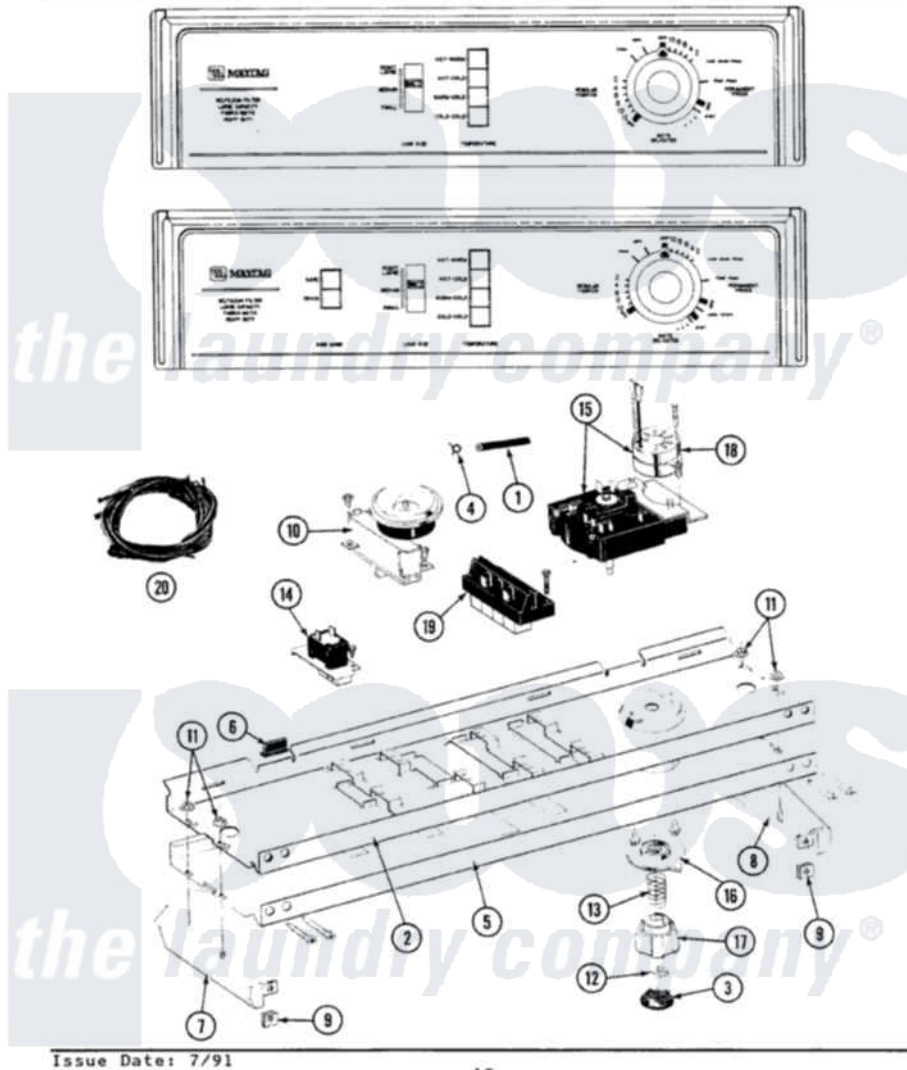

Issue Date: 7/91

12

Maytag [Residential Maytag A7500W Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	212942	<a href="#">22001619</a>		Tube, Water Level Switch
2	<a href="#">214809</a>			Back Up Plate
"	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	215821		Not Available	CAP, KNOB
4	410296	<a href="#">596669</a>		Clamp, Manifold
5	207918		Not Available	CONTROL PANEL
"	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
6	<a href="#">214897</a>			Pad, Control Panel
7	207215		Not Available	END CAP LH
8	207216		Not Available	END CAP RH
9	<a href="#">214894</a>			Fastener, End Cap
10	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
"	207362		Not Available	INFINITE LEVEL PRESSURE SWITCH
11	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder

12	<a href="#">211605</a>		Bezel, Timer Dial
13	<a href="#">211065</a>		Spring, Index Wheel
14	<a href="#">207365</a>		2 Button Switch
"	211168	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
15	207375	Not Available	TIMER
"	213966	<a href="#">3400014</a>	Screw
16	215827	Not Available	TIMER DIAL SKIRT
17	<a href="#">215828</a>		Knob, Timer
18	205033	<a href="#">22205033</a>	Motor- Tim
19	213117	<a href="#">67006908</a>	Screw, Ice Rack
"	207367	Not Available	TEMP CONTROL SWITCH - 4 BUTTON
20	<a href="#">207409</a>		Wire Harness
"	<a href="#">207382</a>		Wire Harness

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>