


# Maytag A8650 04 - CONTROL PANEL

SECTION: CONTROL PANEL  
MODEL: A8640 A8650

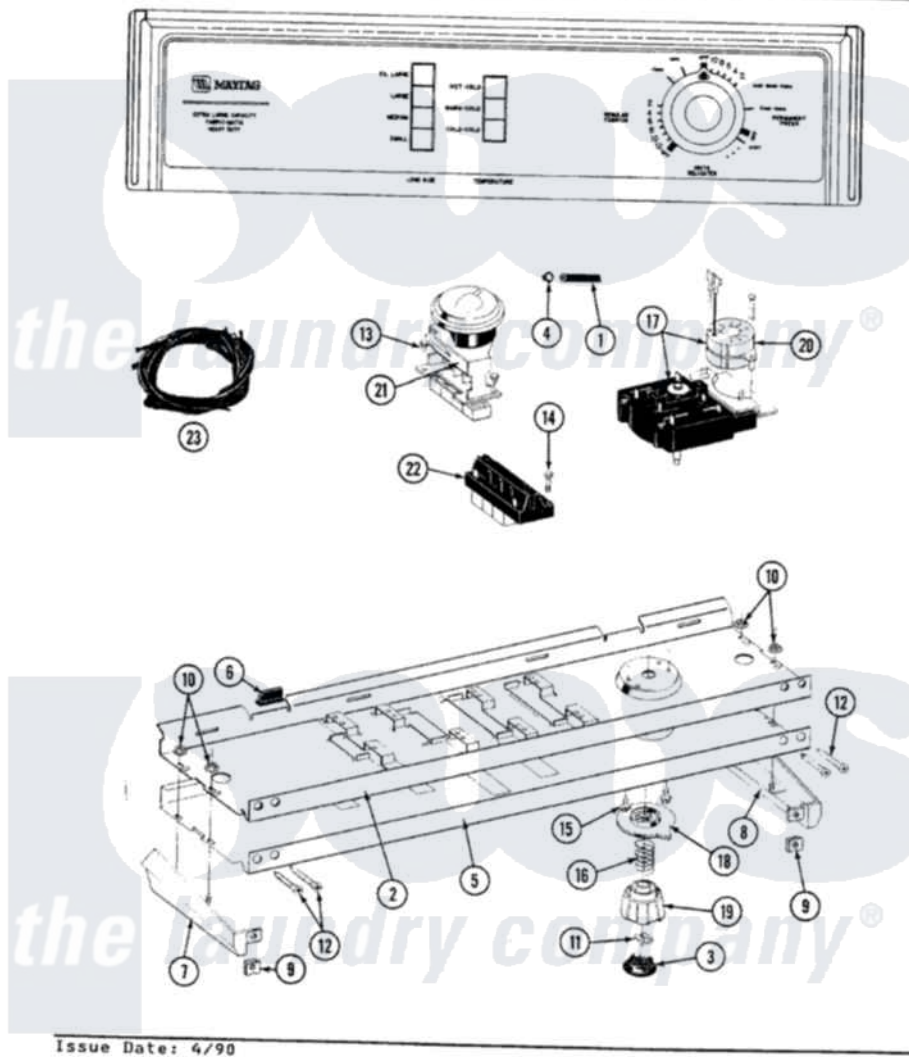

Issue Date: 4/90

14

Maytag [Residential Maytag A8650 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	212942	<a href="#">22001619</a>		Tube, Water Level Switch
2	<a href="#">214818</a>			Back Up Plate
3	215821		Not Available	CAP, KNOB
4	410296	<a href="#">596669</a>		Clamp, Manifold
5	207392		Not Available	CONTROL PANEL
"	208116		Not Available	FACIA A8650/8640
6	<a href="#">214897</a>			Pad, Control Panel
7	207215		Not Available	END CAP LH
8	207216		Not Available	END CAP RH
9	<a href="#">214894</a>			Fastener, End Cap
10	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
11	<a href="#">211605</a>			Bezel, Timer Dial
12	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
13	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
14	213117	<a href="#">67006908</a>		Screw, Ice Rack

15	213966	<a href="#">3400014</a>		Screw
16	<a href="#">211065</a>			Spring, Index Wheel
17	207377		Not Available	TIMER
"	207376	<a href="#">22207376</a>		Timer
18	215827		Not Available	TIMER DIAL SKIRT
19	<a href="#">215828</a>			Knob, Timer
20	205033	<a href="#">22205033</a>		Motor- Tim
21	<a href="#">207361</a>			4 Level Pressure Switch
22	207368		Not Available	TEMP CONTROL SWITCH - 3 BUTTON
"	207367		Not Available	TEMP CONTROL SWITCH - 4 BUTTON
23	<a href="#">207383</a>			Wire Harness
"	<a href="#">207382</a>			Wire Harness

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>