


# Maytag A8800 04 - CONTROL PANEL

SECTION: CONTROL PANEL  
 MODEL: A8800 A8820 A8840

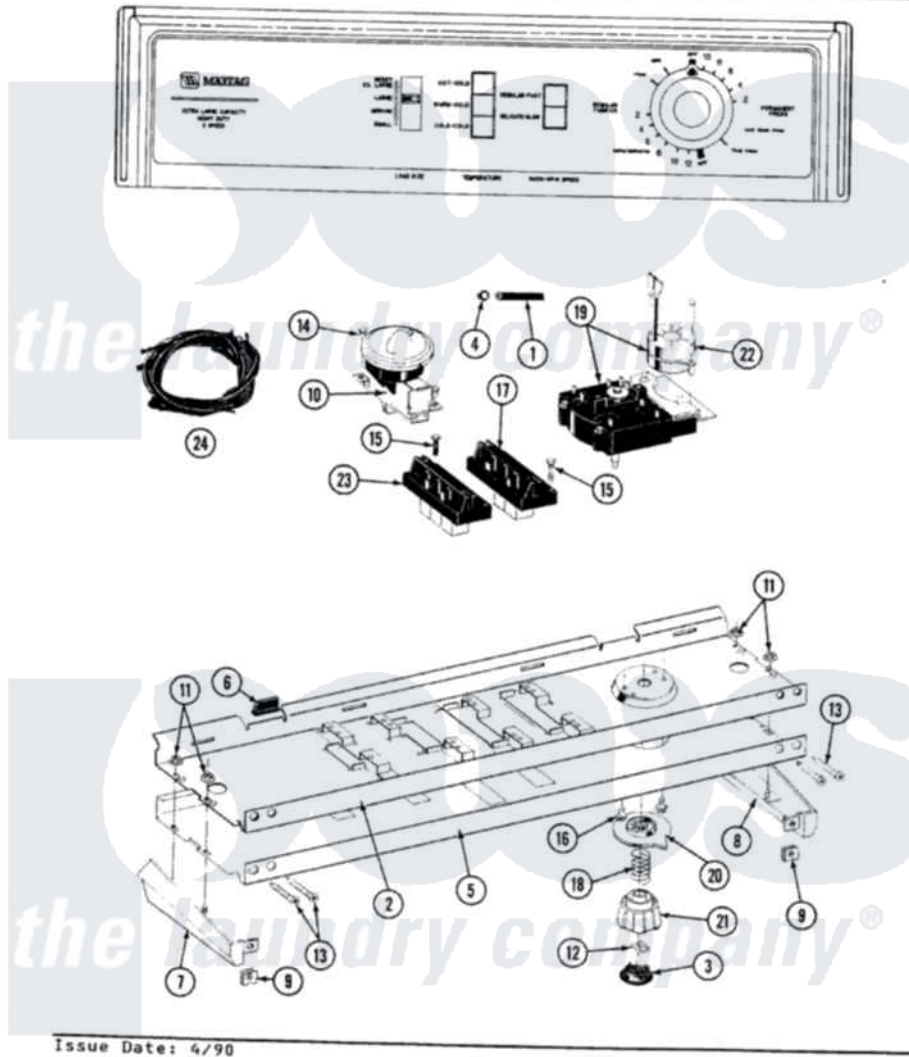

Issue Date: 4/90

18

Maytag [Residential Maytag A8800 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	212942	<a href="#">22001619</a>		Tube, Water Level Switch
2	<a href="#">214809</a>			Back Up Plate
3	215821		Not Available	CAP, KNOB
4	410296	<a href="#">596669</a>		Clamp, Manifold
5	<a href="#">207391</a>			Control Panel
6	<a href="#">214897</a>			Pad, Control Panel
7	207215		Not Available	END CAP LH
8	207216		Not Available	END CAP RH
9	<a href="#">214894</a>			Fastener, End Cap
10	<a href="#">207360</a>			Infinite Level Press Switch
11	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
12	<a href="#">211605</a>			Bezel, Timer Dial
13	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
"	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct

14	211168	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
15	213117	<a href="#">67006908</a>	Screw, Ice Rack
"	213117	<a href="#">67006908</a>	Screw, Ice Rack
16	213966	<a href="#">3400014</a>	Screw
17	<a href="#">207370</a>		Speed Control Switch - 2 Butto
18	<a href="#">211065</a>		Spring, Index Wheel
19	207374	Not Available	TIMER
20	215827	Not Available	TIMER DIAL SKIRT
21	<a href="#">215828</a>		Knob, Timer
22	205033	<a href="#">22205033</a>	Motor- Tim
23	207368	Not Available	TEMP CONTROL SWITCH - 3 BUTTON
24	207384	Not Available	WIRE HARNESS

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>