



[Maytag Residential Maytag A900S Washer Parts](#) Parts Diagram 07 - ELECTRICAL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200046		Not Available	CONNECTOR, FEMALE
2	200862		Not Available	BALLAST
3	201012		Not Available	ESCAPEMENT FOR TIMER
4	201423			Receptacle
5	201471		Not Available	LAMP SOCKET AND SEAL
6	201807	12002353		Motor-Drve
7	201822			Control Switch
9	201825		Not Available	ADVANCE MOTOR
10	201826			Fill Switch With Solenoid
11	201831		Not Available	TIMER
12	201833		Not Available	KNOB
13	201835		Not Available	SUDS RETURN SWITCH
14	201838			Starter Socket
15	201840	92790		Starter
16	201841		Not Available	FLUORESCENT TUBE
17	201945		Not Available	GEAR MOTOR SWITCH KIT

18	201946	206415		Switch, Lid
19	201956		Not Available	MOTOR CORD
20	202059			Wire Harness-Control Switch Timr
23	202137		Not Available	LOWER HARNESS
24	202143		Not Available	UPPER WIRE HARNESS W/PLUG
25	202164		Not Available	TIMER MOTOR
26	202807		Not Available	RECEPT FOR FLUORESCENT LAMP
27	210866			Nut, Twin Speed
28	211003		Not Available	BRACKET
29	211017	31001575		Bulb, Cylinder Light
30	211244		Not Available	GASKET
31	211246		Not Available	SPRING CLIP
32	211247		Not Available	RETAINER
33	211249		Not Available	FASTENER
34	211250			Fastener
35	211252			Screw, Ground Wire
36	211410			Screw, HeX Head No.8 X 3/8 Inch
37	211722		Not Available	ARK-LESS TERMINAL
38	211809	Y310376		Clip, Door Switch Harness
39	211967	211410		Screw, HeX Head No.8 X 3/8 Inch
40	212064		Not Available	CONTROL PANEL
41	212065		Not Available	GLASS PANEL
42	212070		Not Available	PANEL BRACKET-RIGHT
43	212071		Not Available	PANEL BRACKET-LEFT
44	212074		Not Available	SPRING
45	212075		Not Available	SWITCH PIN
46	212076		Not Available	LATCH WASHER
47	212077		Not Available	LATCH SPRING
48	212078		Not Available	LATCH
49	212080		Not Available	UNBALANCE LEVER
50	212081		Not Available	EXTENSION SHAFT
51	212082		Not Available	BRACKET
52	212083		Not Available	BRACKET FOR RINSE SWITCH
53	212084		Not Available	BRACKET FOR SUDS SWITCH
54	212087	25-7809		Screw, No.6-20 1/2 Flthd Torx
55	212128		Not Available	INDICATOR BUTTON
56	212153		Not Available	BRACKET FOR GEAR MOTOR SWITCH
57	212154		Not Available	SCREW, No.4-24 X 3/4 INCH
58	212220	213501		Screw, No.6-20 X 1-1/8 Inch
59	212221		Not Available	PALNUT-RINSE SWITCH BRKT-BASE
60	212256		Not Available	DELICATE BUTTON
61	212257		Not Available	WOOL BUTTON
62	212258		Not Available	WASH N WEAR BUTTON
63	212259		Not Available	FULL WHITE LOAD BUTTON
64	212260		Not Available	PARTIAL WHITE LOAD BUTTON
65	212261		Not Available	FULL COLORED LOAD BUTTON

66	212262	Not Available	PARTIAL COLORED LOAD BUTTON
67	212263	Not Available	BRIGHT COLORS BUTTON
68	212264	Not Available	RINSE BUTTON
69	212265	Not Available	SPIN DRI BUTTON
70	212266	Not Available	SPRING-LIGHT BARRIER UNDER BUT
71	212279	Not Available	TWIN FASTENER
72	212406	Not Available	LID SWITCH BRACKET
73	213738		Spring Tension Lever Return
74	310744	Not Available	SCREW-LAMP RECEPTACLE TO BRACK
75	Y052283	M1200004	Cotter Pin K

the laundry company[®]

the laundry company[®]

the laundry company[®]