


# Maytag A9800 04 - CONTROL PANEL

SECTION: CONTROL PANEL

MODEL: A9800

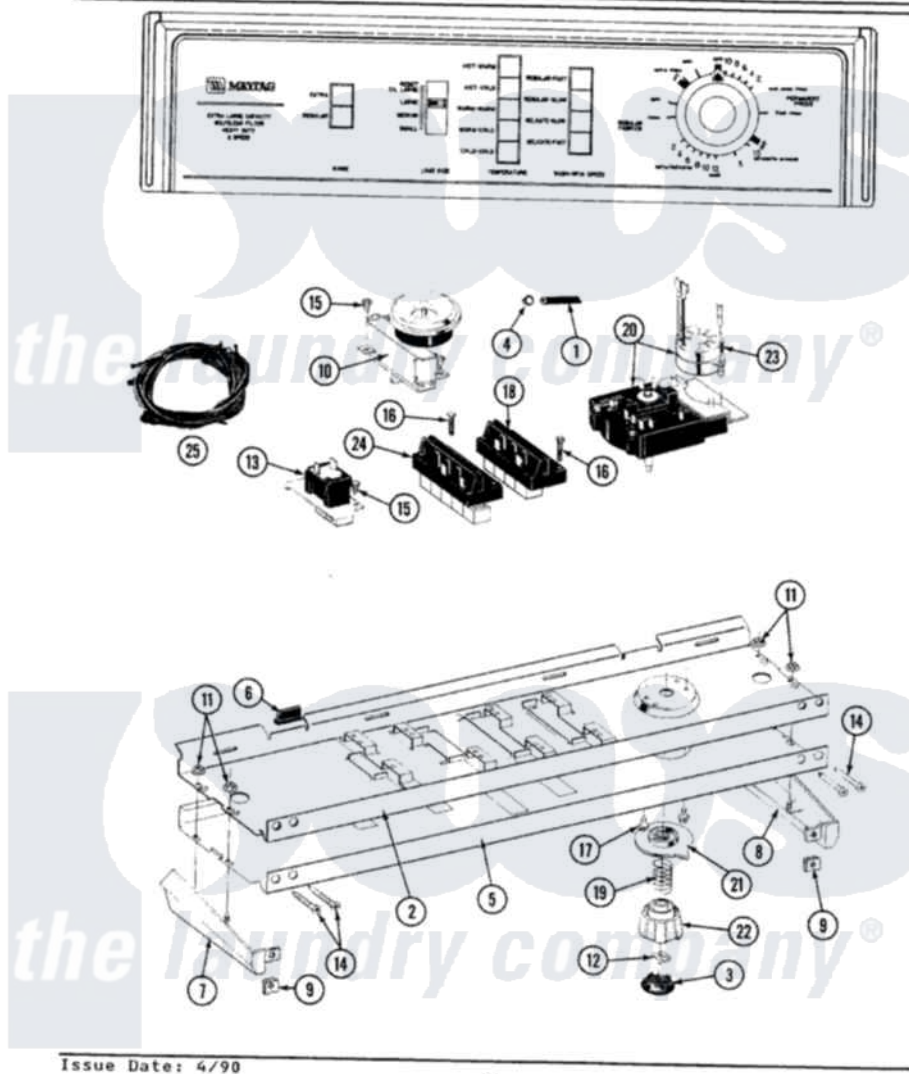

Issue Date: 4/90

30

Maytag [Residential Maytag A9800 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	212949	<a href="#">22001866</a>		Screw, Relay
2	<a href="#">214809</a>			Back Up Plate
3	215821		Not Available	CAP, KNOB
4	410296	<a href="#">596669</a>		Clamp, Manifold
5	207385		Not Available	CONTROL PANEL
6	<a href="#">214897</a>			Pad, Control Panel
7	207215		Not Available	END CAP LH
8	207216		Not Available	END CAP RH
9	<a href="#">214894</a>			Fastener, End Cap
10	<a href="#">207360</a>			Infinite Level Press Switch
11	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
12	<a href="#">211605</a>			Bezel, Timer Dial
13	<a href="#">207365</a>			2 Button Switch
14	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
15	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16

"	211168	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
16	213117	<a href="#">67006908</a>	Screw, Ice Rack
"	213117	<a href="#">67006908</a>	Screw, Ice Rack
17	213966	<a href="#">3400014</a>	Screw
18	207369	Not Available	SPEED CONTROL SWITCH - 4 BUTTO
19	<a href="#">211065</a>		Spring, Index Wheel
20	<a href="#">207371</a>		Timer
21	215827	Not Available	TIMER DIAL SKIRT
22	<a href="#">215828</a>		Knob, Timer
23	205033	<a href="#">22205033</a>	Motor- Tim
24	<a href="#">207366</a>		Temp Control Switch - 5 Button
25	207380	Not Available	WIRE HARNESS

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>