


Maytag AT18PC2 02 - DOOR & RELATED PARTS

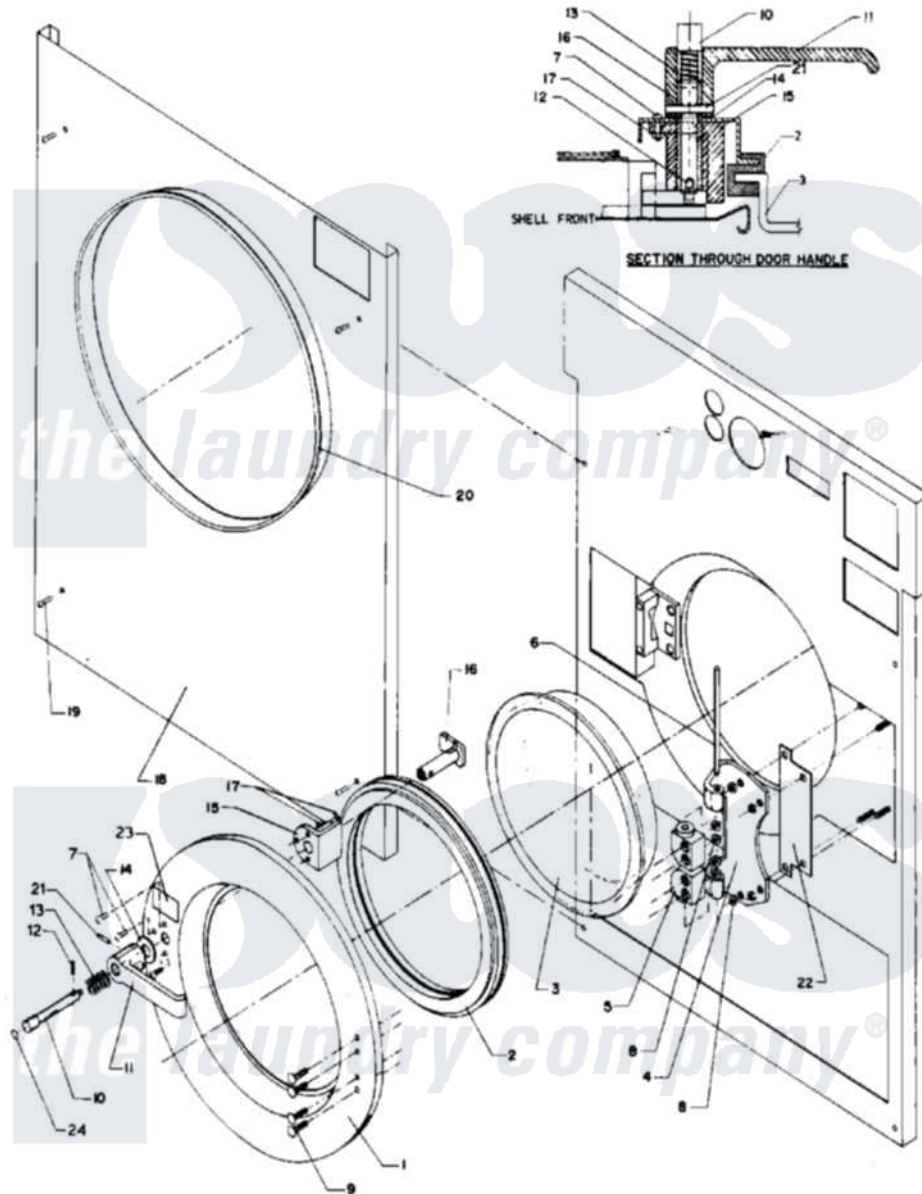

Maytag Residential Maytag AT18PC2 Washer Parts Parts Diagram 02 - DOOR & RELATED PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	24001638			Door Assembly
"	NLA		Not Available	DOOR
002	24001075			Gasket, Door
003	24001098		Not Available	GLASS, DOOR
004	24001333			Hinge, Door
005	24001334			Mount, Door
006	W10124350		Not Available	PART NUMBER NOT AVAILABLE
007	24001341	3400814		Screw
008	24001305			Nut, Fiberlock
009	24001467			Screw, S.s.
010	24001103			Rod, Push Button
011	24001336			Handle, Door
012	24001721			Pin, Spring
013	24001338			Spring, Door Lock
014	24001310	Y015627		Screw- Hex
015	24001340		Not Available	SPACER, DOOR HANDLE

016	24001343		Arm, Latch
017	24001342	74005230	Nut, Lock
018	24001133		Not Available
			KIT, PNL, FRT COIN (STLS.)
"	24001728		Not Available
			OUTER PANEL KIT (COIN ALM)
"	NLA		Not Available
			PANEL KIT, FRONT OPL
019	24001474	3400086	Screw, 10-32 X 3/8
020	24001722		Not Available
			TRIM, OUTER FRONT PANEL
021	24001827	24001721	Pin, Spring
022	24001466		Shim, Hinge
023	24001462		Not Available
			DECAL, PUSH BUTTON RED
024	24001407		Not Available
			DECAL, RED DOT

the laundry company[®]

the laundry company[®]

the laundry company[®]