


# Maytag AT18PC2 04 - CONTROL MODULE

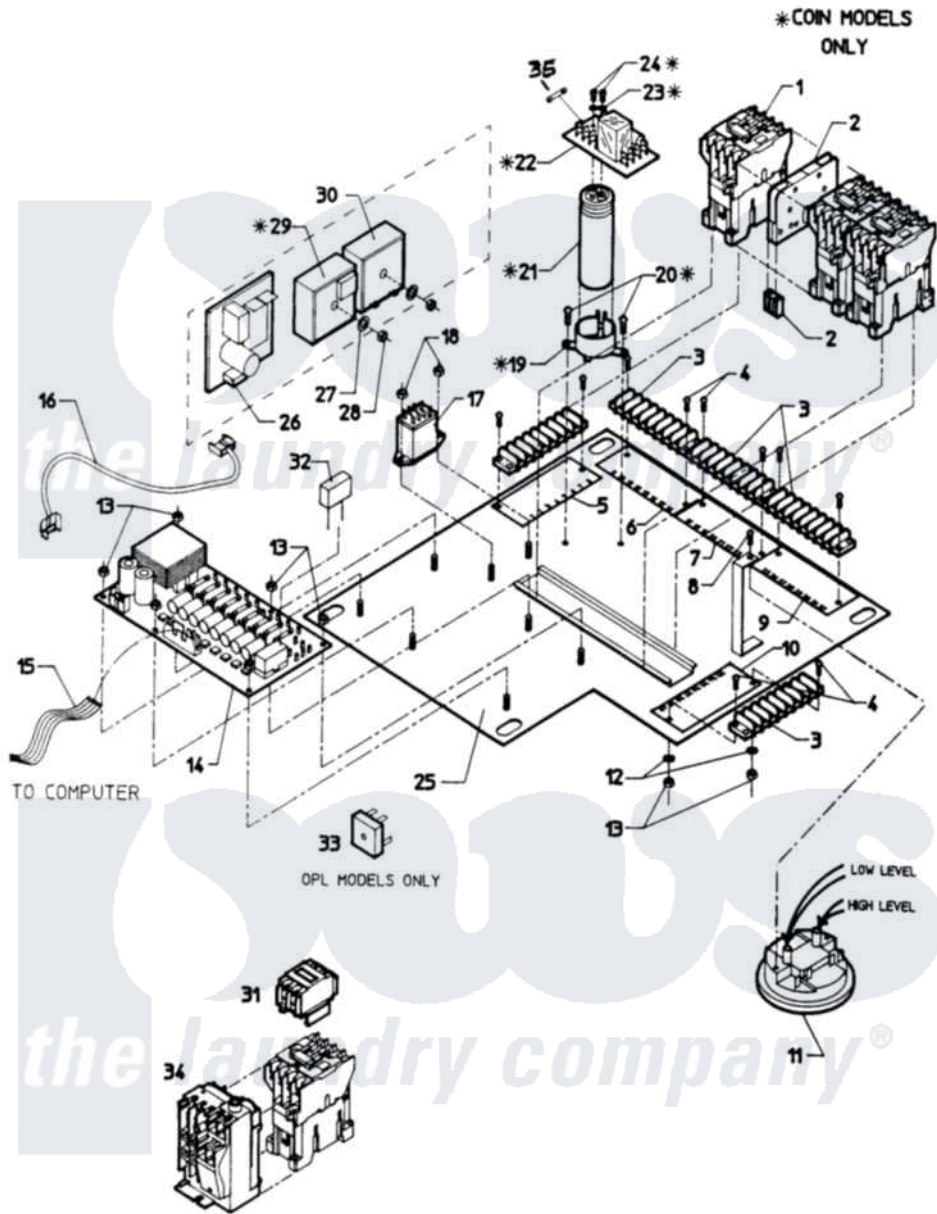

Maytag Residential Maytag AT18PC2 Washer Parts Parts Diagram 04 - CONTROL MODULE  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	24001105	<a href="#">24002051</a>		Contactor-
002	<a href="#">24001108</a>			Interlock, Mech, Contactor
003	24001412		Not Available	STRIP, TERMINAL
004	24001414	<a href="#">4450038</a>		Screw
005	NLA		Not Available	DECAL,INSUL. TERM STRIP (1-8)
006	NLA		Not Available	DECAL,INSUL. TERM STRIP (9-16)
007	NLA		Not Available	DECAL,INSUL. TERM STRIP (17-24)
008	24001411	<a href="#">313806</a>		Screw
009	NLA		Not Available	DECAL,INSUL. TERM STRIP (25-32)
010	24001030		Not Available	DECAL,INSUL. TERM STIRP (33-40)
011	NLA		Not Available	SWITCH, TRI LEVEL---N
012	<a href="#">24001415</a>			Washer, S.s.
013	24001417	<a href="#">7103P070-60</a>		Nut, Top Pilot

014	<a href="#">24001181</a>		Board Kit
"	<a href="#">24001244</a>		Fuse
"	<a href="#">24001246</a>		Fuse,
015	<a href="#">24001590</a>		Cable, 16-Oin Ribbon
016	<a href="#">24001410</a>		Harness, Battery Back-Up
017	24001177	<a href="#">24001110</a>	Relay- Fla
018	24001417	<a href="#">7103P070-60</a>	Nut, Top Pilot
019	W10124350	Not Available	PART NUMBER NOT AVAILABLE
020	24001578	<a href="#">3196170</a>	Screw
021	<a href="#">24001247</a>		Capacitor, Door Lock
022	24001248	Not Available	PC BOARD, DOOR UNLOCK (110V)
023	<a href="#">24001579</a>		Washer, S.s.
024	<a href="#">24001580</a>		Screw, S.s.
025	<a href="#">24001587</a>		Panel, Electrical
026	<a href="#">24001243</a>		Board, Battery Bckup
027	<a href="#">24001295</a>		Lockwasher, S.s.
028	24001419	<a href="#">W10139757</a>	Nut
029	<a href="#">24001176</a>		Kit, Timer Delay
030	<a href="#">24001418</a>		Relay, Time Delay
031	<a href="#">24001752</a>		Relay, Time Delay
032	24001109	Not Available	FILTER, RC-NTWK.
033	<a href="#">24001753</a>		Bridge, Rectifier
034	W10124350	Not Available	PART NOT USED
035	W10124350	Not Available	PART NOT USED

