


Maytag DCZ1010 02 - CONTROL PANEL

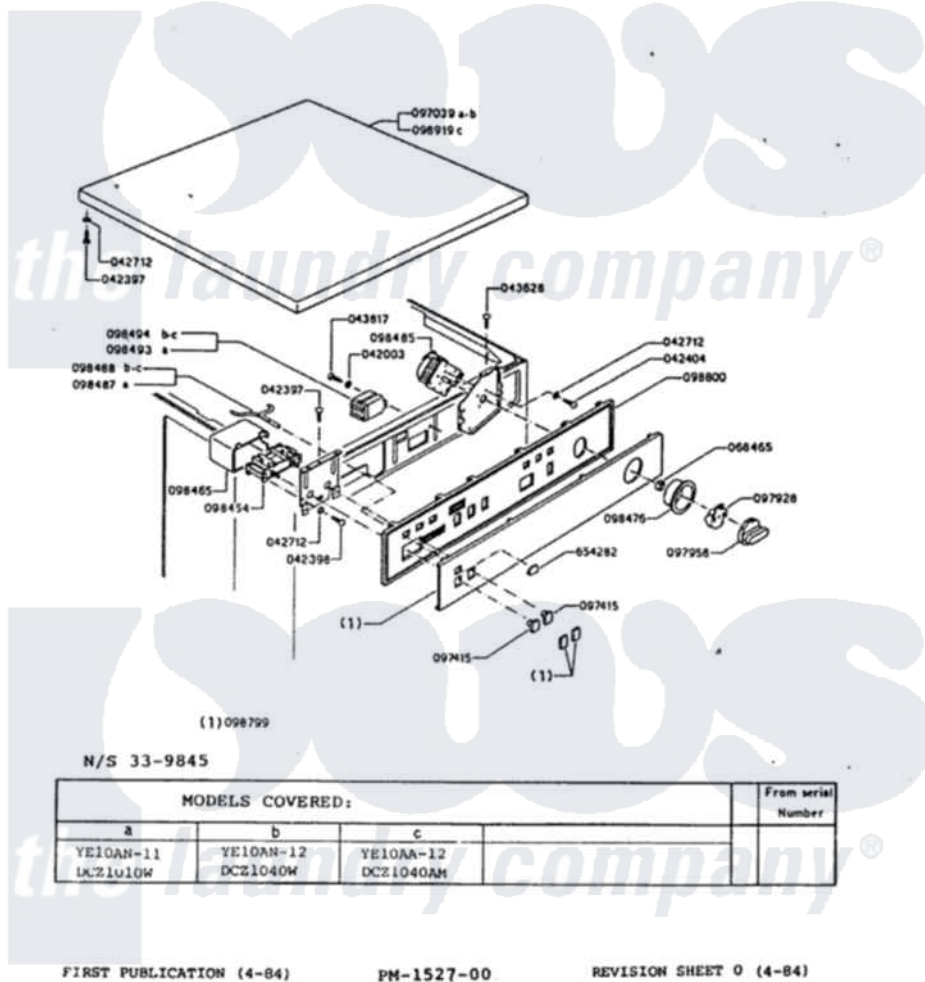

Maytag [Residential Maytag DCZ1010 Stacked Washer and Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	042003		Not Available	FLAT WASHER
2	042397	8-1400-0-6		Small Round Box
3	042398		Not Available	SCREW
4	042404		Not Available	BOLT
5	042712		Not Available	LOCKWASHER
6	043628		Not Available	SCREW
7	043817		Not Available	SCREW
8	068465		Not Available	RING
9	097039		Not Available	TOP
10	097415		Not Available	PUSHBUTTON
11	097928			Timer Knob
12	097958		Not Available	TIMR KNOB COVER
13	098454		Not Available	PB SWITCH
14	098465		Not Available	SWITCH HOUSING
15	098476		Not Available	PROGRAM INDEX
16	Y098485		Not Available	TIMER

17	098487	Not Available	WARNING LIGHT
19	098493	Not Available	RELAY
21	098799	Not Available	NORGE TRIM KIT
22	098800	Not Available	CONTROL PANEL
24	654282	Not Available	GLASS
25	33-9845	Not Available	NAMEPLATE

