


Maytag DE16CT 07 - FRONT VIEW

2

MODELS DE & DG16

SPECIFY COLOR IF OTHER THAN WHITE

FRONT VIEW

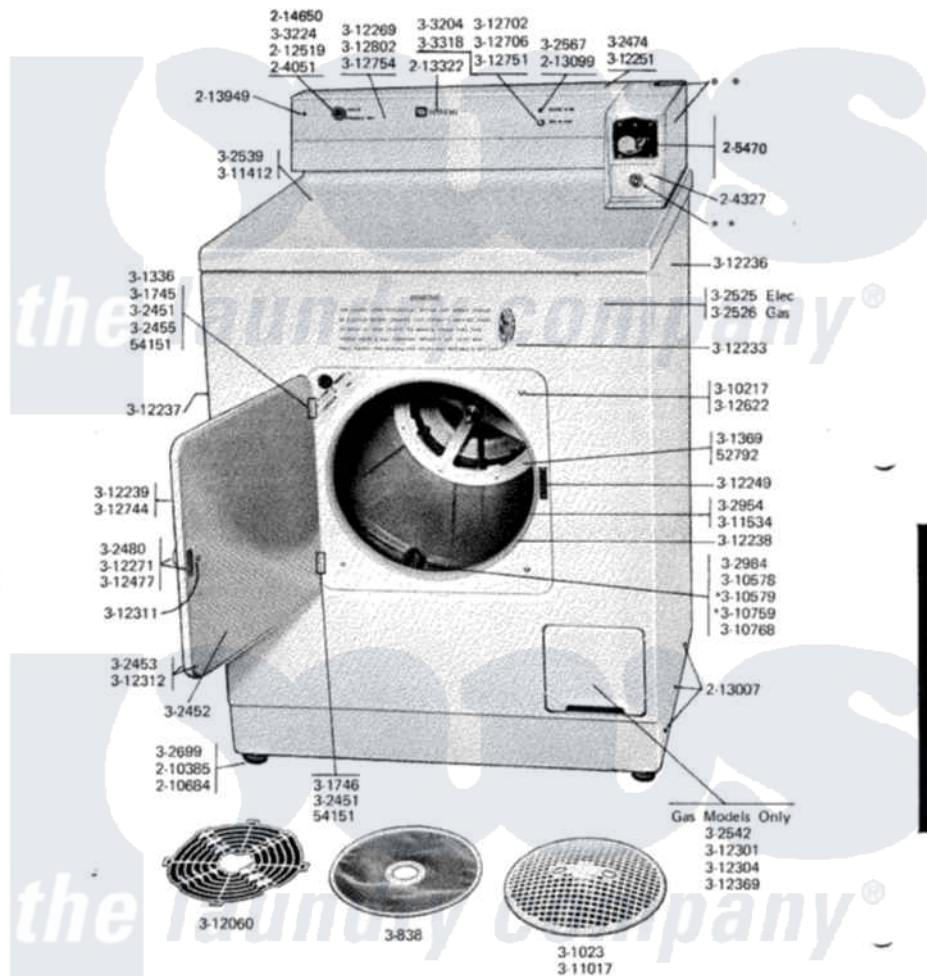

* Use 3-10579 with bakelite baffle ** CONTACT YOUR COMMERCIAL LAUNDRY DISTRIBUTOR FOR KEYS,
 * Use 3-10759 with polypropylene baffle LOCKS, TICKETS, TICKET DISPENSERS AND CONTROL CENTERS.
 Copyright 1968 THE MAYTAG COMPANY • Newton, Iowa • Printed in U.S.A. (Revised 11-73)

Maytag Residential Maytag DE16CT Dryer Parts Parts Diagram 07 - FRONT VIEW

Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|--------------------------|---------------|----------------------|
| 1 | 205470 | | Not Available | MAYTAG COIN SLIDE |
| 2 | 300838 | | | Lint Screen |
| 3 | 301023 | | | Lint Screen Retainer |
| 4 | Y301336 | | | Door Switch |
| 5 | 301369 | | Not Available | SHAFT WITH SPIDER |
| 6 | 301745 | 304299 | | Hinge - Upper |
| 7 | 301746 | Y304298 | | Hinge - Lower |
| 8 | 302451 | | | Hinge Assembly |
| 9 | 302452 | | | Door Liner |
| 10 | 302453 | | Not Available | DOOR-WHITE |
| 12 | 302474 | | Not Available | CONTROL COVER-WHITE |
| 13 | 302480 | | Not Available | LATCH |
| 14 | 302525 | | Not Available | FRONT PANEL-WHITE |
| 15 | 302539 | | Not Available | TOP COVER-WHITE |
| 16 | 302567 | 302877 | | Pilot Light |
| 17 | Y302699 | 22003428 | | Leg, Adjustable |

| | | | |
|----|-------------------------|---------------------------|---|
| 18 | 302954 | Not Available | DRUM W/FELT - PORCELAIN |
| 19 | 302984 | | Baffle Assembly - Poly |
| 21 | Y303224 | | Selector Switch |
| 22 | Y303318 | | Switch Assembly With Hex Nu |
| 23 | 310217 | Not Available | No Longer Available |
| 24 | 310578 | Not Available | WASHER |
| 25 | 310579 | Not Available | SCREW, No.10-24 X 11/16 INCH |
| 26 | Y310759 | | Screw, Tumbler Baffles |
| 27 | 310768 | Not Available | WASHER |
| 28 | Y311017 | | Retainer Spring |
| 29 | 311412 | | Screw |
| 30 | 311534 | | Felt Seal |
| 31 | 311551 | | Clip For Door Harness |
| 32 | Y312060 | Not Available | SHIELD FOR SPIDER----C |
| 33 | 312233 | Not Available | DRYING INSTRUCTION OVERLAY |
| 34 | 312236 | Not Available | PANEL-WHITE |
| 35 | 312237 | Not Available | PANEL-WHITE |
| 36 | 312238 | | Door Seal |
| 37 | 312239 | Not Available | DOOR PANEL-WHITE |
| 38 | 312249 | Not Available | STRIKE PLATE |
| 39 | 312251 | Not Available | BACK FOR CONTROL PANEL |
| 40 | 312255 | Not Available | ANGLE FOR CABINET - DRYER |
| 41 | 312269 | Not Available | CONTROL PANEL |
| 42 | 312271 | Not Available | HANDLE |
| 43 | 312311 | 312311MAY | Screw |
| 44 | 312312 | Not Available | INSULATION - DOOR |
| 45 | 312477 | Not Available | MAGNETIC LATCH RETAINER |
| 46 | 312622 | 22001496 | Front Panel Fastener And Screw |
| 47 | Y312702 | | Knurled Nut, Start Switch |
| 48 | Y312706 | 422617 | Nut |
| 49 | Y312744 | | Door Panel-White |
| 50 | 312751 | | Lockwasher, Start Switch |
| 51 | 312754 | 31-2754 | Minimanual |
| 52 | 312802 | Not Available | CONTROL PANEL |
| 53 | 204051 | 22204051 | Knob |
| 54 | 204327 | Not Available | COIN BOX-WHITE----NA |
| 55 | 210385 | | Lock Nut For Adjustable Leg |
| 56 | 210684 | | Foot, Adjustable Leg |
| 57 | 211294 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 58 | 212276 | W10116760 | Screw |
| 59 | 212519 | 488234 | Screw 8-32 X 1/4 |
| 60 | 213007 | | Xfor Cabinet See Cabinet, Back |
| 61 | 213099 | | Lens For Control Panel |
| 62 | 213322 | Not Available | MAYTAG DECAL |
| 63 | 213949 | | Screw, No.8-18 X 5/16 Inch |
| 64 | 052792 | | Screw, 1 1/4-20 X 5/16 |
| 65 | 054151 | | Screw, No.4-40 X 1/4 |
| 66 | 214650 | | Screw For 2-4051 Knob |