


Maytag DE18CA 11 - TUMBLER FRONT, LINT SCREEN & RETAINER

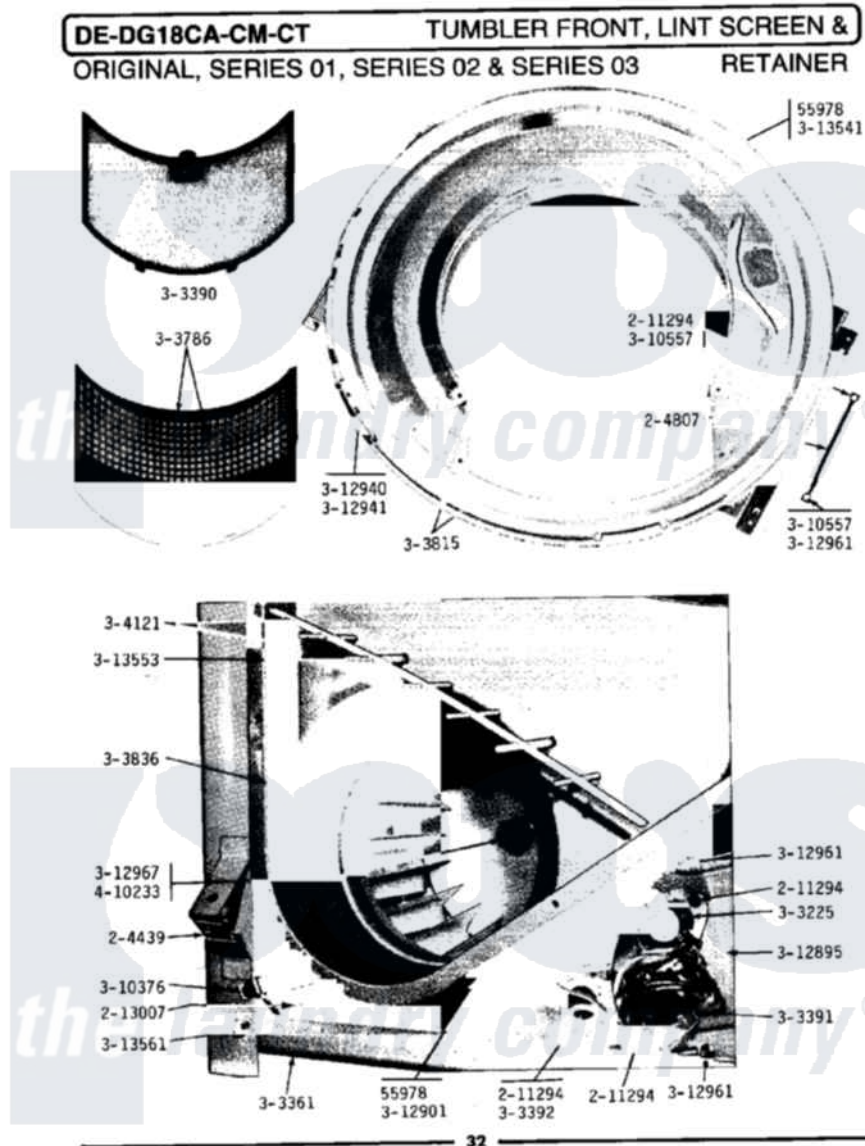

Maytag [Residential Maytag DE18CA Dryer Parts](#) Parts Diagram 11 - TUMBLER FRONT, LINT SCREEN & RETAINER
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y055978			Rubber Adhesive, 2 Oz Tube
002	204439			Screw And Fstner Assembly
003	204807			Ground Wire, Supp. Plte To Top Cover
004	210720			Rivet, Bearing To Tumbler Fmt
005	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
006	213007			Xfor Cabinet See Cabinet, Back
007	Y303225			Thermostat, Permanent Press
008	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
009	Y303390		Not Available	LINT SCREEN
010	Y303391	33303391		Thermostat, Cycling
011	303392			Thermostat, Cycling
012	Y303786		Not Available	LINT SCREEN WITH RETAINER
013	Y303815	33001231		Front- Tumbler

014	Y303836		Blower Wheel Assembly And Clamp
015	NLA	Not Available	OUTLET GRID AND DUCT
016	Y304810	Not Available	OUTLET DUCT ASSEMBLY---S
017	Y310376		Clip, Door Switch Harness
018	310557		Washer
019	Y312895	Not Available	COVER FOR BLOWER---NA
020	Y312901		Seal, Housing Cover
021	312940	306508	Tumbler Bearing Kit ---W
022	312941	306508	Tumbler Bearing Kit ---W
023	Y312961	W10116751	Screw
024	Y312964	Not Available	OUTLET DUCT - OUTER HALF
025	312967		Clamp, Blower Housing
026	Y313541	33313541	Seal- Tumbler
027	NLA	Not Available	GRID FOR OUTLET DUCT
028	Y313561		Screw---NA
029	Y313795		Guide For Lint Screen
030	Y313796		Lint Seal
031	410233	9703438	Ring-Retrn

