

Maytag DE18CM 04 - CONTROL PANEL-REAR VIEW



Maytag [Residential Maytag DE18CM Dryer Parts](#) Parts Diagram 04 - CONTROL PANEL-REAR VIEW
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204051	22204051		Knob
002	212276	W10116760		Screw
003	212519	488234		Screw 8-32 X 1/4
004	212949	22001866		Screw, Relay
005	212950	M0227520		Screw-Tc No.6-32 X 13/16", Preform SwiTch
006	212951			Screw, No.6-32 X 1/4 Inch
007	213099			Lens For Control Panel
008	213949			Screw, No.8-18 X 5/16 Inch
009	214650			Screw For 2-4051 Knob
010	NLA		Not Available	CONTROL COVER-WHITE
011	NLA		Not Available	CONTROL COVER-HARVEST WHEAT
012	Y303204			Start Switch With Nuts
013	NLA		Not Available	CABINET-WHITE
014	NLA		Not Available	CABINET-ALMOND
015	NLA		Not Available	CABINET-HARVEST WHEAT

016	NLA		Not Available	TOP COVER-WHITE
017	NLA		Not Available	TOP COVER-ALMOND
018	NLA		Not Available	TOP COVER-HARVEST WHEAT
019	Y303420		Not Available	SELECTOR SWITCH
020	NLA		Not Available	MAIN WIRE HARNESS
021	Y303703			Pilot Light
022	NLA		Not Available	SCREW & WASHER ASSY.
023	310557			Washer
024	Y310632	1163839		Screw
025	Y311423	489483		Screw 10-32 X 1/2
026	NLA		Not Available	BACK FOR CONTROL PANEL
027	Y312702			Knurled Nut, Start Switch
028	Y312706	422617		Nut
029	312751			Lockwasher, Start Switch
030	Y312905		Not Available	COVER, TERMINAL
031	NLA		Not Available	CONTROL PANEL
032	Y313561			Screw---NA
033	910768	M0280301		Tie Electr

