


Maytag DE18CT 07 - CT CONTROL CENTER COMPONENTS

DE-DG18CT

CT CONTROL CENTER COMPONENTS

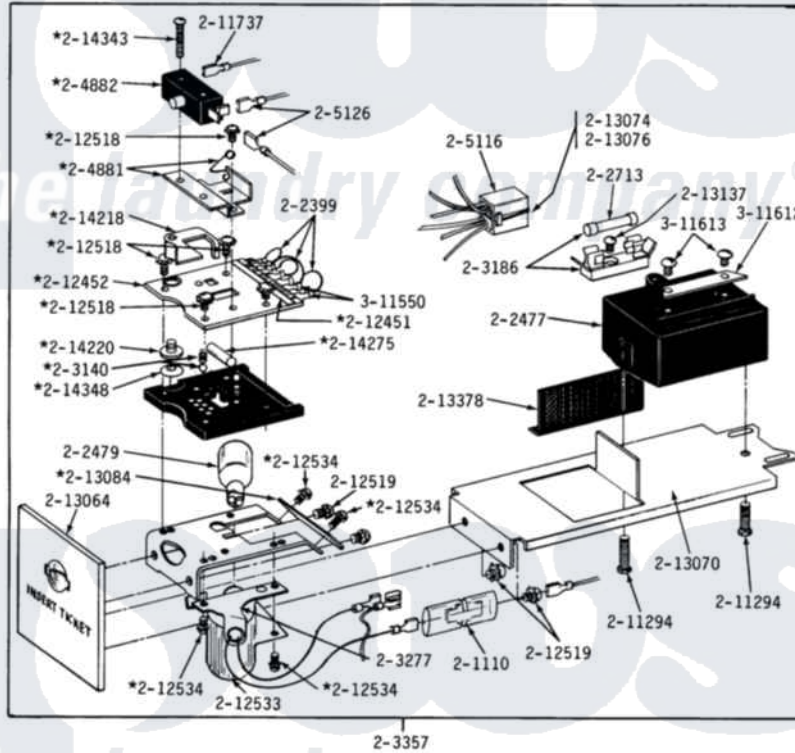

Maytag Residential Maytag DE18CT Dryer Parts Parts Diagram 07 - CT CONTROL CENTER COMPONENTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y201110		Not Available	CONNECTOR, WIRE (INDIC. LIGHT)
002	NLA		Not Available	JUMPER WIRE (BLACK)
003	202477	22003292		Control As
004	202479	A3167501		Lamp Oven, Int.
005	202509			Ticket Control Assembly
006	202713	22001555		Fuse
007	203140			Contact Ball Kit
008	NLA		Not Available	FUSE BLOCK WITH FUSE
009	NLA		Not Available	LAMP SOCKET WITH BRACKET
010	NLA		Not Available	TICKET RECEIVER ASSEMBLY
011	204881			Cam Plate Assembly
012	204882		Not Available	SWITCH FOR TICKET CONTROL
013	NLA		Not Available	HARNESS FOR TICKET CONTROL

014	NLA		Not Available	SPADE CONNECTOR
015	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
016	211737	248562		Terminal
017	NLA		Not Available	OVERLAY FOR CIRCUIT BOARD
018	212452			Board, Circuit
019	NLA		Not Available	SEMS SCREW (No.4-40 X 1/2 INC)
020	212519	488234		Screw 8-32 X 1/4
021	212533			SHIELD FOR HEAT LAMP
022	NLA		Not Available	SCREW, SHIELD TO CONTROL
023	NLA		Not Available	FRONT PLATE F/TICKET CONTRO
024	NLA		Not Available	BRACKET FOR TICKET ASSEMBLY
025	213074			Pin Receptacle For Plug
026	NLA		Not Available	PIN FOR PLUG
027	NLA		Not Available	TICKET DEFLECTOR
028	NLA		Not Available	SCREW (No.6 X 1/4 INCH)
029	NLA		Not Available	SHIELD
030	214218			Lever, Switch
031	214220			Adjustment Thumb Wheel
032	214275			Roller For Cam
033	NLA		Not Available	SCREW
034	NLA		Not Available	SPRING WASHER
035	Y311550		Not Available	SPADE (MINIATURE)
036	311612		Not Available	COVER, CIRCUIT BOARD TERMINALS
037	311613	Y311711		Screw, Fuse Block

