


Maytag DE19CS 02 - CABINET-REAR

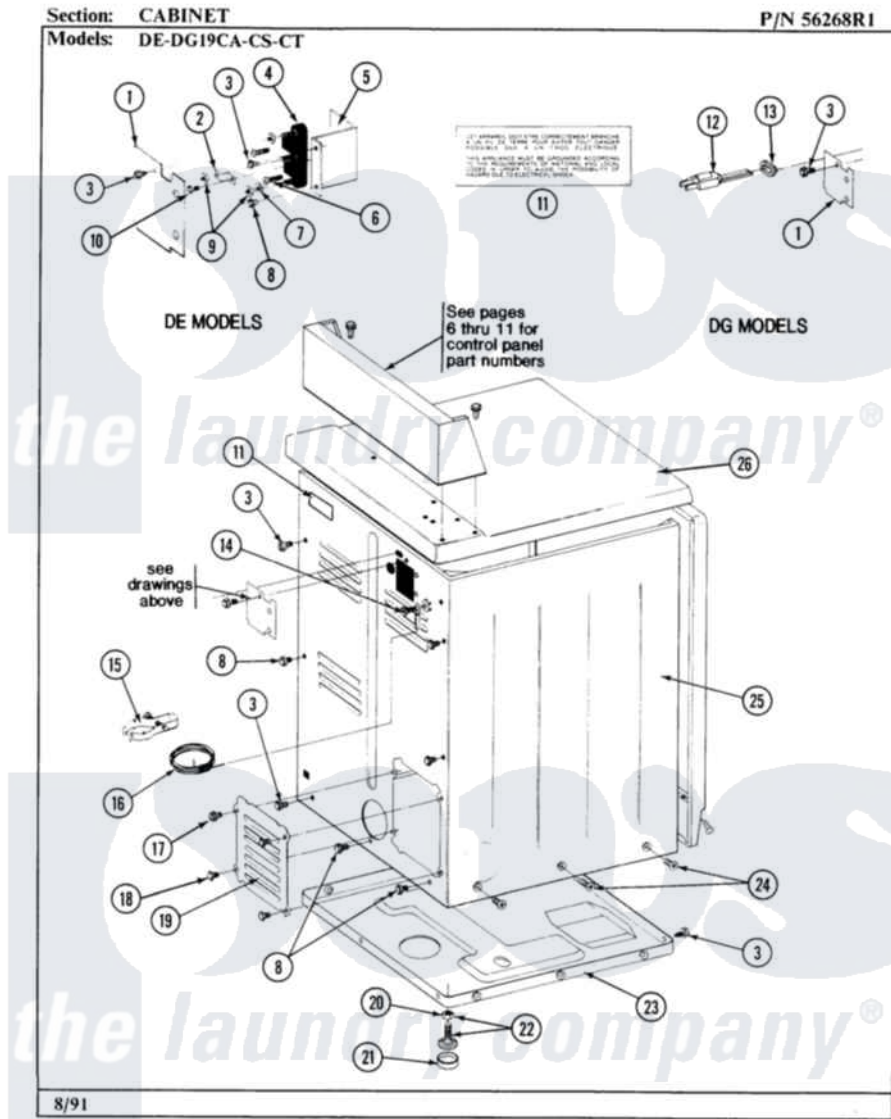

4

Maytag Residential Maytag DE19CS Dryer Parts Parts Diagram 02 - CABINET-REAR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y312905		Not Available	COVER, TERMINAL
002	Y312184			Strap, Grounding
003	Y313561			Screw---NA
004	400008			Block, Terminal
005	Y312904			Bracket, Terminal Block
006	Y312209	W10001200		Screw
007	Y311270			Washer, Terminal Block
008	Y310632	1163839		Screw
009	311484	112432		Nut
010	Y311423	489483		Screw 10-32 X 1/2
011	214519			LABEL, ELECTRICAL INSTR. PART NOT USED-GAS MODELS ONLY
012	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
013	211881			Grommet, Cord Part Not Used-Gas Models Only
014	NLA		Not Available	SCREW & WASHER ASSY.

015	301548		Clamp, Ground Wire
016	311155		Ground Wire And Clamp
017	Y313559		Screw
018	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
019	Y312951	Not Available	ACCESS COVER, BACK
020	Y052740	62739	Nut, Lock
021	Y314137		Foot, Rubber
022	Y305086		Adjustable Leg And Nut
023	Y303361	Not Available	BASE ASSY. (UPPER & LOWER)
024	213007		Xfor Cabinet See Cabinet, Back
025	NLA	Not Available	CABINET-WHITE
026	NLA	Not Available	TOP COVER-ALMOND
"	Y305191	Not Available	TOP COVER-WHITE

