


Maytag DE210 02 - CONTROL PANEL

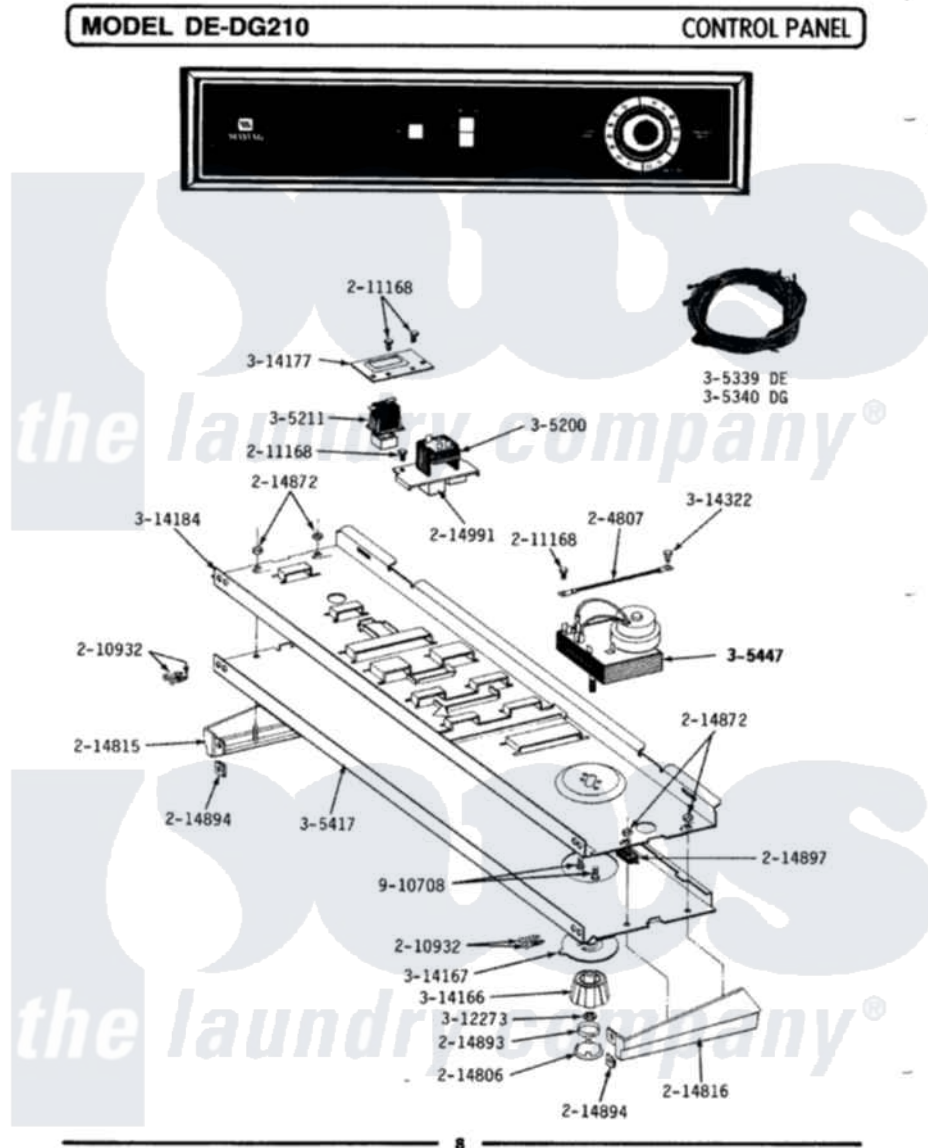

Maytag Residential Maytag DE210 Dryer Parts Parts Diagram 02 - CONTROL PANEL

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	204807			Ground Wire, Supp. Plte To Top Cover
2	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	211168	W10139210		Screw, 8-18 X 5/16
4	214806		Not Available	CAP FOR TIMER KNOB
5	214815			End Cap F/Control Panel-LH
6	214816			End Cap F/Control Panel-RH
7	214872			Palnut, End Cap Note: Nut, Lamp Holder
8	214893		Not Available	DETENT RING F/TIMER KNOB CA
9	214894			Fastener, End Cap
10	214897			Pad, Control Panel
11	214991			Button For Switch
12	305200		Not Available	TEMPERATURE SELECTOR SWITCH
13	305211			Push To Start Switch

14	305447	Not Available	TIMER
15	305339	Not Available	MAIN WIRE HARNESS
16	305340	Not Available	MAIN WIRE HARNESS
17	305417	Not Available	CONTROL PANEL
18	312273		Nut, Control Knob
19	Y314166		Knob For Timer
20	314167	Not Available	TIMER DIAL INDICATOR
21	314177	Not Available	BRACKET FOR START SWITCH
22	314184		Back Up Plate
23	Y314322	211251	Screw, Transformer
24	910708	488234	Screw 8-32 X 1/4

Howes
the laundry company®

Howes
the laundry company®

Howes
the laundry company®