


Maytag DE210 04 - FRONT VIEW

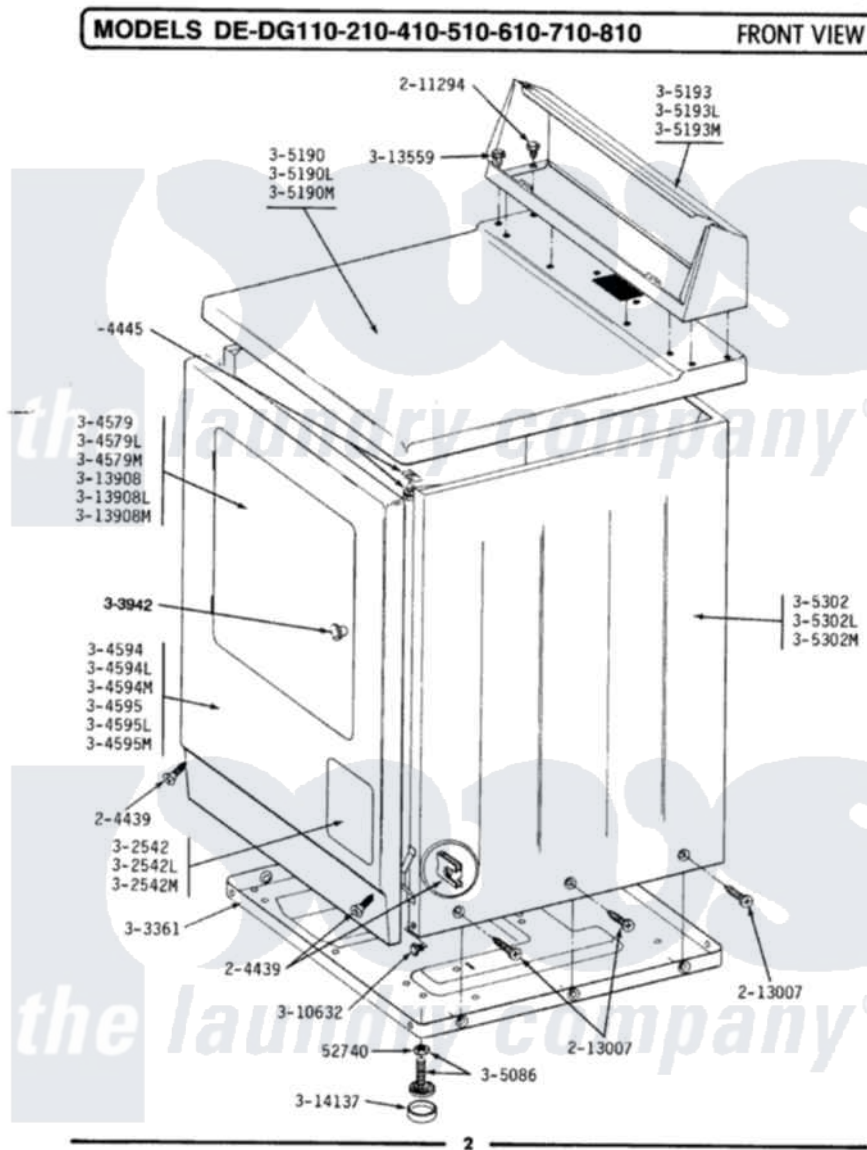

Maytag [Residential Maytag DE210 Dryer Parts](#) Parts Diagram 04 - FRONT VIEW
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|------------------------|-------------------------|---------------|---|
| 1 | Y052740 | 62739 | | Nut, Lock |
| 2 | 204439 | | | Screw And Fstner Assembly |
| 3 | 204445 | | | Screw And Fastener Assembly |
| 4 | 211294 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 5 | 213007 | | | Xfor Cabinet See Cabinet, Back |
| 6 | 302542 | | Not Available | PART NOT USED. (DG ONLY) |
| 7 | 302542L | | Not Available | PART NOT USED. (DG ONLY) |
| 8 | 302542M | | Not Available | ACCESS DOOR-HARVEST WHEAT |
| 9 | Y303361 | | Not Available | BASE ASSY. (UPPER & LOWER) |
| 10 | Y304579 | | | DOOR (WHT) |
| 13 | 304594 | | | Front Panel-White |
| 14 | 304594L | | Not Available | FRONT PANEL-ALMOND |
| 15 | 304594M | 3369903 | | Dishrack |
| 16 | 304595 | 3369903 | | Dishrack |

| | | | |
|----|-------------------------|-------------------------|------------------------|
| 19 | Y305086 | | Adjustable Leg And Nut |
| 20 | Y305190 | 307104 | Top Cover Assembly |
| 23 | Y305193 | | Console |
| 26 | 305302 | Not Available | CABINET-WHITE |
| 29 | 303942 | Not Available | KNOB AND SCREW |
| 30 | Y310632 | 1163839 | Screw |
| 31 | Y313559 | | Screw |
| 32 | Y313908 | | DOOR PANEL-WHITE |
| 35 | Y314137 | | Foot, Rubber |

