


# Maytag DE21CA 01 - FRONT VIEW

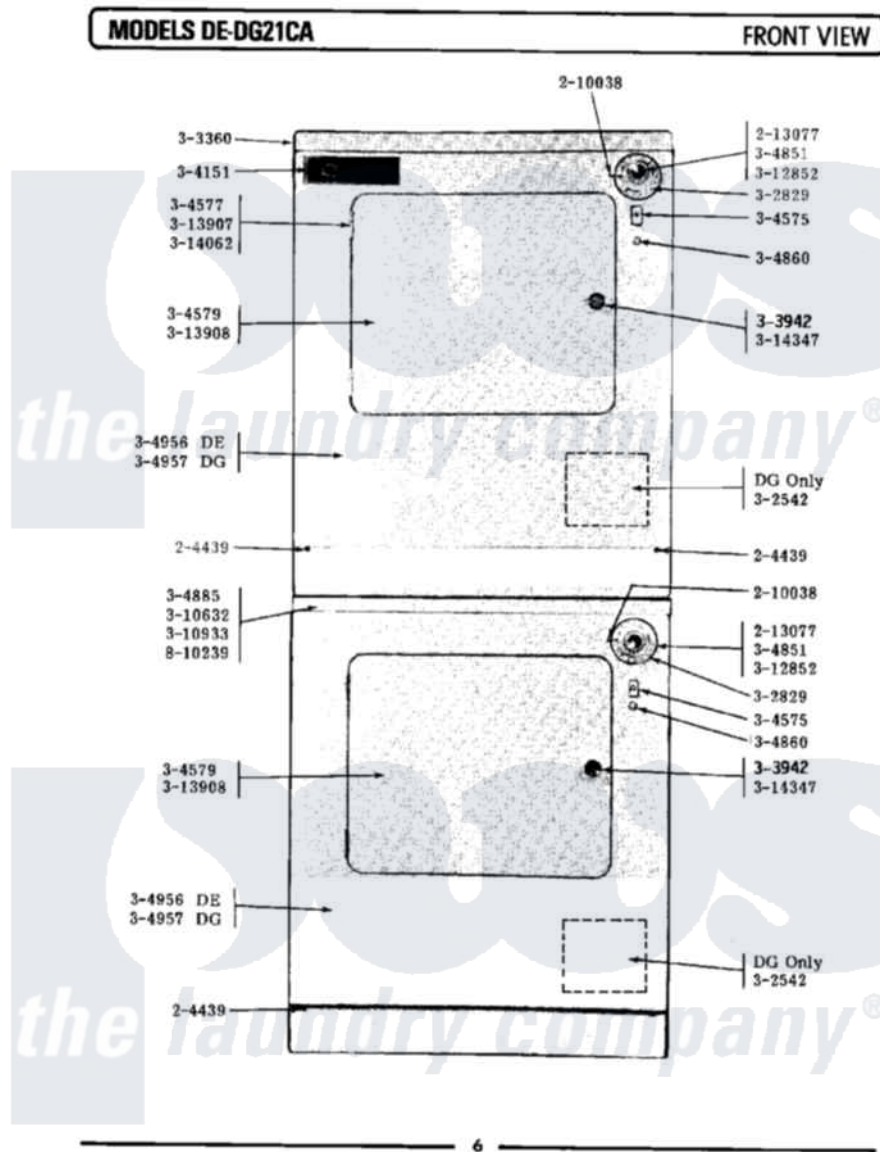

Maytag [Residential Maytag DE21CA Dryer Parts](#) Parts Diagram 01 - FRONT VIEW  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">204439</a>			Screw And Fstner Assembly
002	NLA		Not Available	BUTTON MARKER
003	213077		Not Available	CAP FOR TIMER KNOB
004	<a href="#">Y302829</a>			Timer Dial And Knob
005	NLA		Not Available	TOP COVER-WHITE
006	NLA		Not Available	NAME PLATE ON CONTROL PANEL
007	Y304575	<a href="#">W10169313</a>		Switch-Dor
008	Y304577	<a href="#">33001230</a>		Hinge, Door
009	Y304579			DOOR (WHT)
010	NLA		Not Available	TIMER---NA
011	304860		Not Available	INDICATOR LIGHT
012	NLA		Not Available	SPACER ASSEMBLY
013	NLA		Not Available	FRONT PANEL - DE MODELS
014	NLA		Not Available	KNOB AND SCREW
015	Y310632	<a href="#">1163839</a>		Screw
016	310933	<a href="#">33002194</a>		Nut, Speed

017	<a href="#">312852</a>		Selector Knob-Clear Acrylic
018	<a href="#">Y313907</a>		Fastener, Twin
019	Y313908		DOOR PANEL-WHITE
020	<a href="#">Y314062</a>		Screw, Door Hinge And Panel
021	NLA	Not Available	SCREW FOR DOOR KNOB---- NA
022	NLA	Not Available	SCREW

