


Maytag DE21CA 03 - FRONT PANEL

MODELS DE-DG21CA **FRONT PANEL**

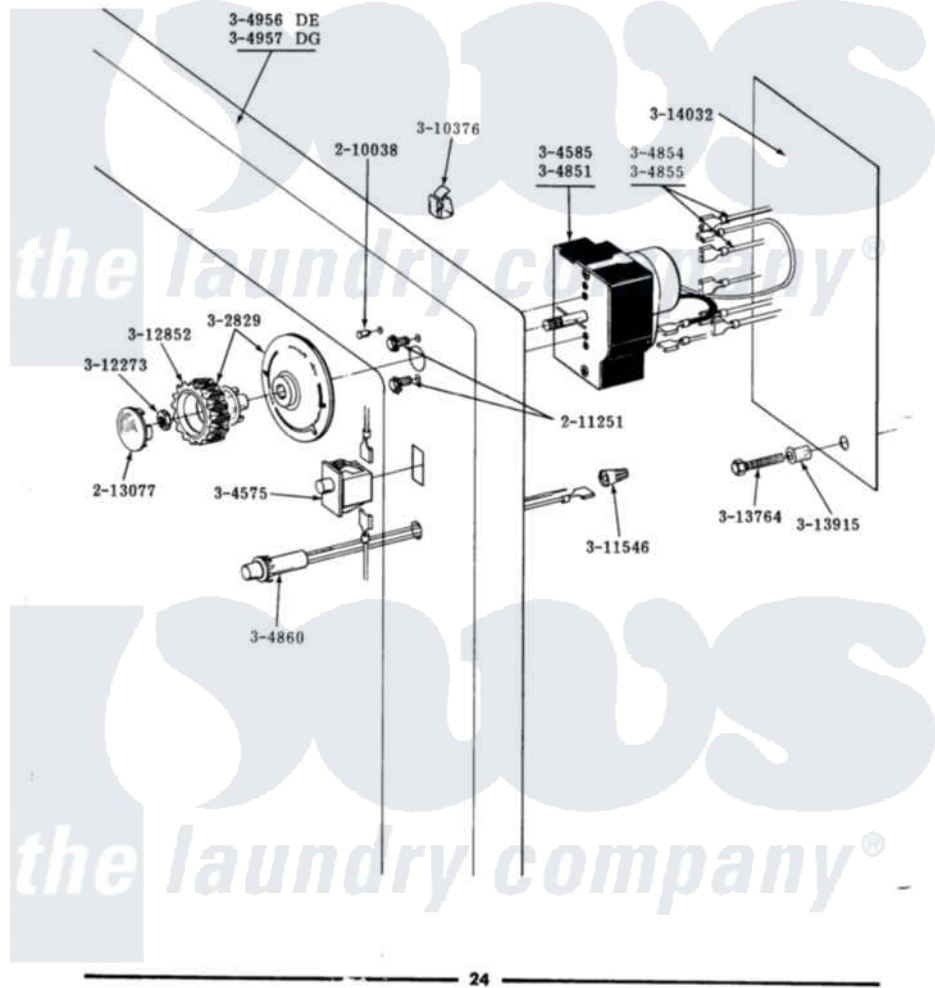

Maytag [Residential Maytag DE21CA Dryer Parts](#) Parts Diagram 03 - FRONT PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	BUTTON MARKER
002	211251			Screw, Transformer
003	213077		Not Available	CAP FOR TIMER KNOB
004	Y302829			Timer Dial And Knob
005	Y304575	W10169313		Switch-Dor
006	Y304585			Timer Motor RPR For 305214 Timer Only
007	NLA		Not Available	TIMER---NA
008	NLA		Not Available	MAIN WIRE HARNESS
009	304860		Not Available	INDICATOR LIGHT
010	NLA		Not Available	FRONT PANEL - DE MODELS
011	Y310376			Clip, Door Switch Harness
012	311546	911445		Wire Connector
013	312273			Nut, Control Knob
014	312852			Selector Knob-Clear Acrylic
015	NLA		Not Available	SCREW
016	NLA		Not Available	COVER, THREAD

