

015	Y303836		Blower Wheel Assembly And Clamp
016	Y303877	Not Available	SWITCH, MOTOR EXTERNAL START No.303358-2, No.303358-4, 303358-7
017	Y303879		Switch, Motor External Start
018	Y303945		IDLER SPRING ASSY. W/PLUG
019	Y305087	22003544	Adjustable Leg W/Foot And Nut
020	Y305185	6-3051850	Pulley- MO
021	NLA	Not Available	WIRE
022	Y310632	1163839	Screw
023	Y312527		Washer, Idler Shaft
024	Y312853		Cover For Thermostat Openin
025	Y312893		Housing, Blower
026	Y312894	315772	Sleeve, Idler Arm
027	Y312895	Not Available	COVER FOR BLOWER---NA
028	NLA	Not Available	SUPPORT, MOTOR
029	Y312901		Seal, Housing Cover
030	312958	354987	Ring, Retaining
031	Y312959		Poly "V" Belt For Tumbler
032	Y312961	W10116751	Screw
033	312967		Clamp, Blower Housing
034	Y313262	W10116752	Retainer-
035	Y313561		Screw---NA
036	Y313582	W10116756	Spacer
037	410233	9703438	Ring-Retrn
038	410490		Spring, Retainer Wire Harness
039	901220		Ground Wire
040	910343	488234	Screw 8-32 X 1/4

