


Maytag DE306 03 - CONTROL PANEL & COMPONENTS

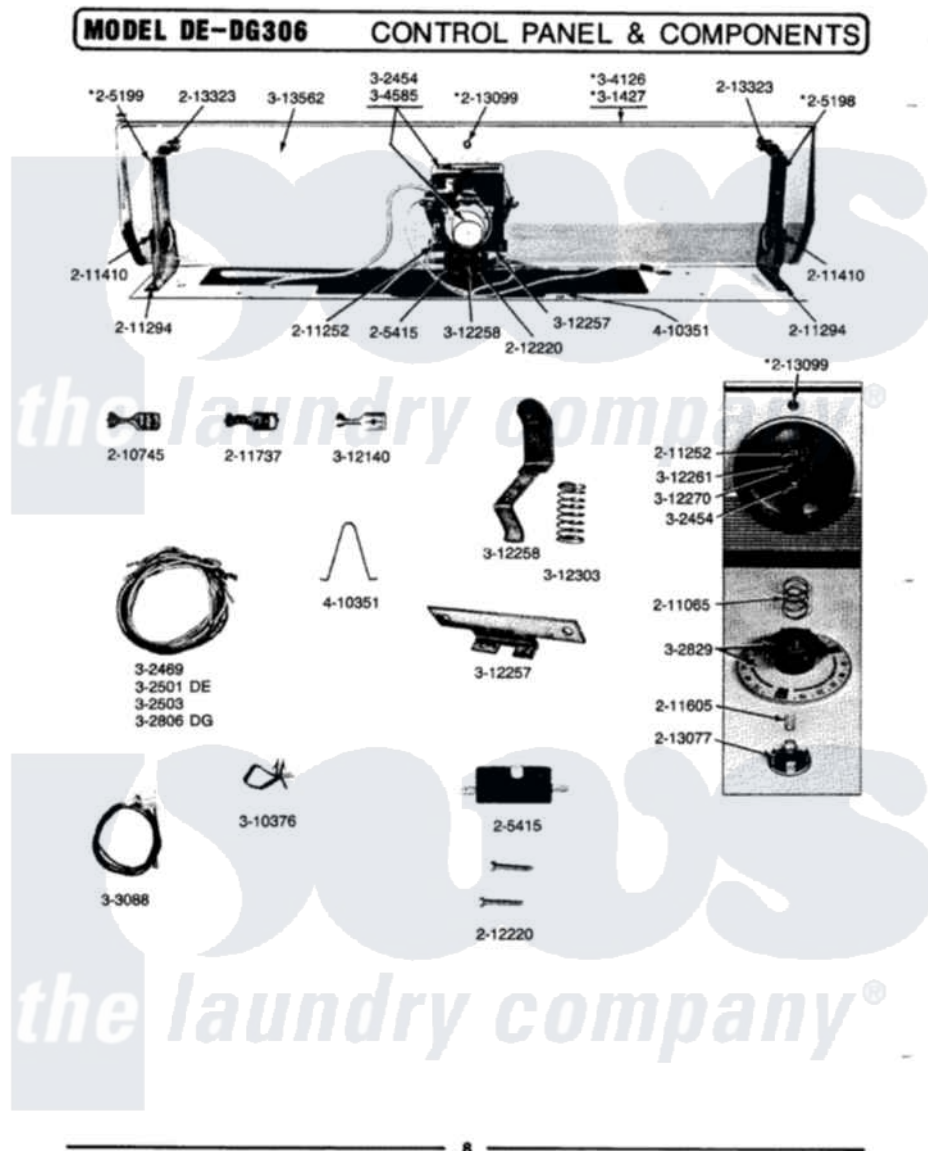

Maytag [Residential Maytag DE306 Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL & COMPONENTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	205199		Not Available	BRACKET KIT - RIGHT HAND
3	205415	279347		Switch-Lid
4	210745			Wire Terminal
5	211065			Spring, Index Wheel
6	211252			Screw, Ground Wire
7	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	211410			Screw, HeX Head No.8 X 3/8 Inch
9	211605			Bezel, Timer Dial
10	211737	248562		Terminal
11	212220	213501		Screw, No.6-20 X 1-1/8 Inch
12	213077		Not Available	CAP FOR TIMER KNOB
13	213099			Lens For Control Panel
14	213323			Fastener, Exhaust Duct Kit
15	Y302454	33302454		Timer
16	302469		Not Available	HARNES FOR SHROUD

17	302501	Not Available	HARNES
18	302503	Not Available	HARNES
19	302806	Not Available	WIRE HARNES
20	Y302829		Timer Dial And Knob
21	303088	Not Available	GAS VALVE WIRES WITH PLUG
22	304126		Control Panel, Sea-Mist
23	304127	Not Available	CONTROL PANEL KIT, SEA-MIST
24	Y304585		Timer Motor RPR For 305214 Timer Only
25	Y310376		Clip, Door Switch Harness
26	Y312140		Wire Connector
27	312257	Not Available	BRACKET
28	312258		Actuator
29	312261	Not Available	WASHER
30	Y312270		Clip, Spring Retainer
31	312303		Spring
32	313562	Not Available	BACK-UP PLATE
33	410351	Not Available	HARNES RETAINER

