


# Maytag DE307 01 - CABINET REMOVED

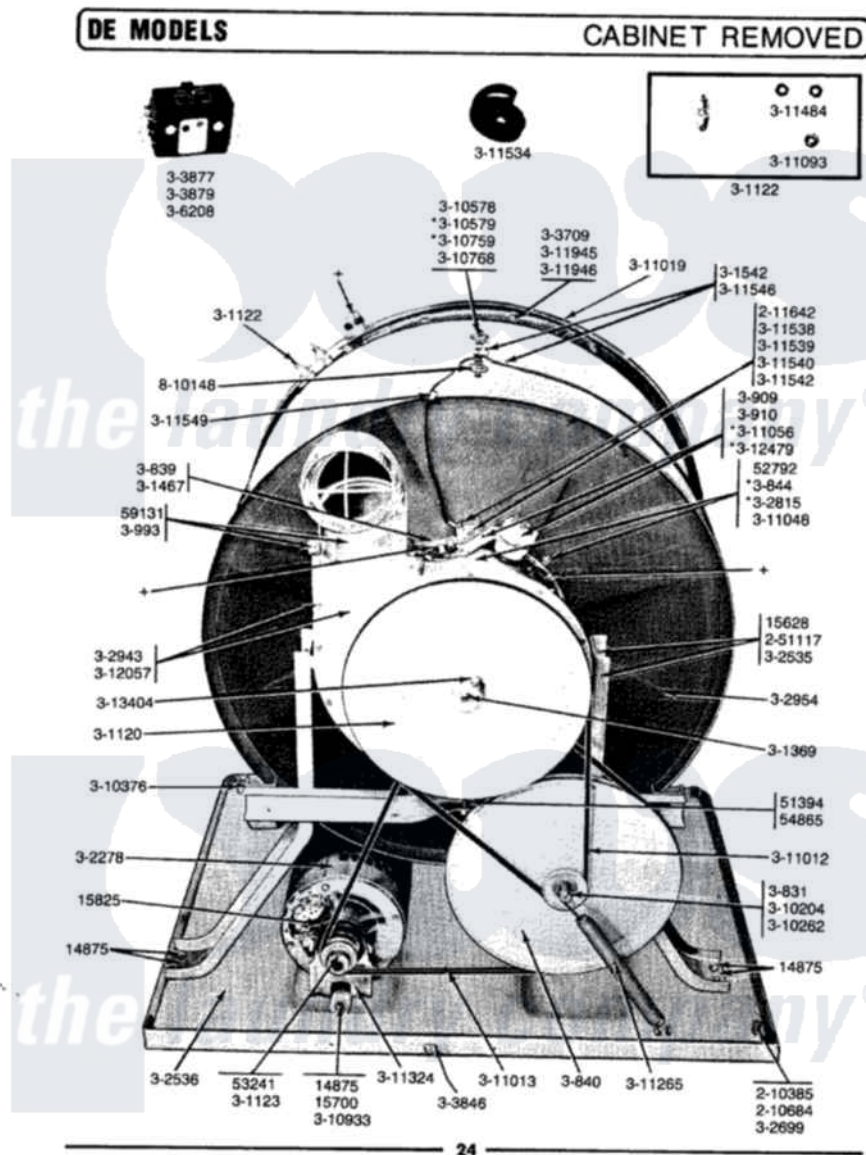

Maytag Residential Maytag DE307 Dryer Parts Parts Diagram 01 - CABINET REMOVED  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	014875		Not Available	CAP SCREW, No.14 X 1/2
2	015628		Not Available	BOLT, 5/16 X 3/4 HEX
3	015700		Not Available	CAP SCREW, 1/4-20 X 1/2
4	<a href="#">Y015825</a>			Clip, Motor To Motor Support
5	051394		Not Available	BOLT, 5/16 X 2-1/8
6	<a href="#">052792</a>			Screw, 1 1/4-20 X 5/16
7	<a href="#">Y053241</a>			Set Screw, Motor Pulley
8	054865		Not Available	LOCK WASHER, 5/16 X 3/32
9	<a href="#">Y059131</a>			Elbow, Venting
10	<a href="#">210385</a>			Lock Nut For Adjustable Leg
11	<a href="#">210684</a>			Foot, Adjustable Leg
12	211642		Not Available	SCREW, No.6-20 X 3/8 INCH
13	300831		Not Available	SHAFT AND SLIDE
14	300839		Not Available	SEAL
15	300840		Not Available	REDUCTION PULLEY
16	<a href="#">Y300844</a>			Exhaust Housing

19	<a href="#">Y301120</a>		Drum Pulley
20	301122	<a href="#">Y304596</a>	Terminal Insulator Assembly
21	301123	Not Available	MOTOR PULLEY
22	301369	Not Available	SHAFT WITH SPIDER
23	<a href="#">Y302278</a>		Motor
24	302535	Not Available	SUPPORT
25	302536	Not Available	BASE
26	Y302699	<a href="#">22003428</a>	Leg, Adjustable
27	<a href="#">Y302815</a>		Blower Housing With Bearing
28	302943		COVER WITH LINT SEAL-BLOWER
29	302954	Not Available	DRUM W/FELT - PORCELAIN
30	<a href="#">303709</a>		Clip And Insulator Assembly
32	303846	<a href="#">22003781</a>	Screw, Ground Strap
33	<a href="#">Y310376</a>		Clip, Door Switch Harness
34	310578	Not Available	WASHER
35	<a href="#">Y310759</a>		Screw, Tumbler Baffles
36	310768	Not Available	WASHER
37	310933	<a href="#">33002194</a>	Nut, Speed
38	<a href="#">Y311012</a>		Drive Belt
39	<a href="#">Y311013</a>		Motor Belt
40	311019	<a href="#">Y311946</a>	Heater Wire 240 Volt
41	<a href="#">311093</a>		Washer, Terminal Connection
42	<a href="#">311265</a>		Spring
43	<a href="#">311324</a>		Motor Base
44	<a href="#">311534</a>		Felt Seal
45	<a href="#">Y311538</a>		Carbon Brush Holder
46	Y312057	<a href="#">910624</a>	Screw
48	Y313404	<a href="#">Y301120</a>	Drum Pulley
49	211642	Not Available	SCREW, No.6-20 X 3/8 INCH
50	251117	Not Available	LOCK WASHER
51	301467	Not Available	SLIP RING
52	301542	Not Available	WIRE HARNESS FOR DRUM
53	Y303877	Not Available	SWITCH, MOTOR EXTERNAL START No.303358-2, No.303358-4, 303358-7
54	<a href="#">Y303879</a>		Switch, Motor External Start
55	306208	<a href="#">Y302278</a>	Motor
56	310204	Not Available	SNAP RING
57	<a href="#">310262</a>		Washer
58	310579	Not Available	SCREW, No.10-24 X 11/16 INCH
59	311048	Not Available	WASHER, ALUMINUM
61	311484	<a href="#">112432</a>	Nut
62	<a href="#">Y311539</a>		Spring For Carbon Brush
63	311540	Not Available	COVER FOR CARBON BRUSH
64	Y311542	Not Available	CARBON BRUSH
65	311546	<a href="#">911445</a>	Wire Connector
66	810148	Not Available	SCREW